


Exhaust gas temperature senders - exploded view

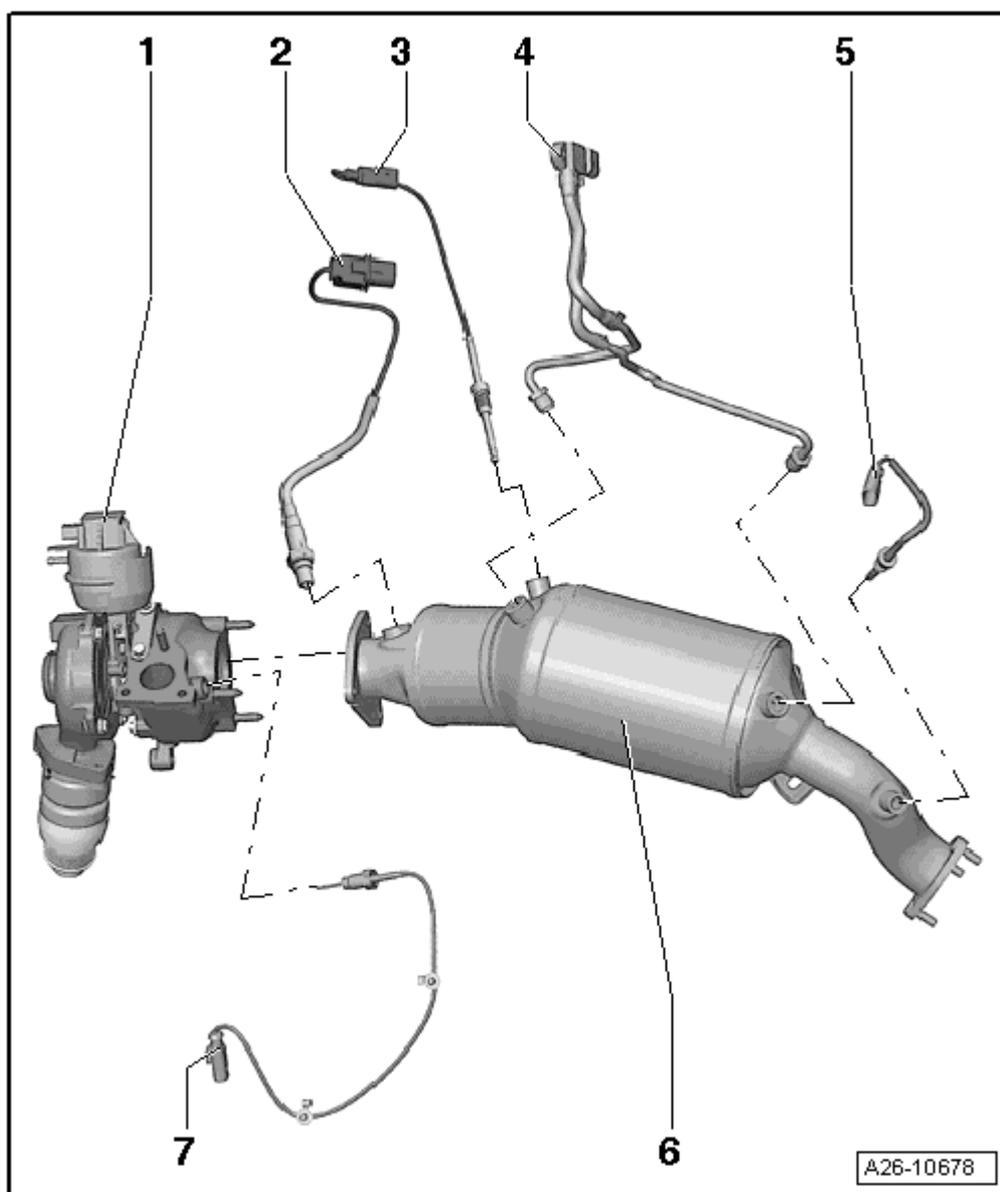

1 - Turbocharger

2 - Lambda probe -G39- with Lambda probe heater -Z19-

q Removing and installing → [Rep. gr.23](#)

3 - Exhaust gas temperature sender 3 -G495-

q 45 Nm

q Removing and installing → [Chapter](#)

q Coat with high-temperature paste; for high-temperature paste refer to → [Electronic parts catalogue](#)

4 - Exhaust gas pressure sensor 1 -G450-

q Removing and installing → [Rep. gr.23](#)

q Pressure pipes to particulate filter: 45 Nm

q Coat with high-temperature paste; for high-temperature paste refer to → [Electronic parts catalogue](#)

5 - Exhaust gas temperature sender 4 -G648-

q 45 Nm

q Removing and installing → [Chapter](#)

q Coat with high-temperature paste; for high-temperature paste refer to → [Electronic parts catalogue](#)

6 - Particulate filter

7 - Exhaust gas temperature sender 1 -G235-

q 45 Nm

q Removing and installing → [Chapter](#)

q Coat with high-temperature paste; for high-temperature paste refer to → [Electronic parts catalogue](#)