


Exhaust gas temperature senders - exploded view

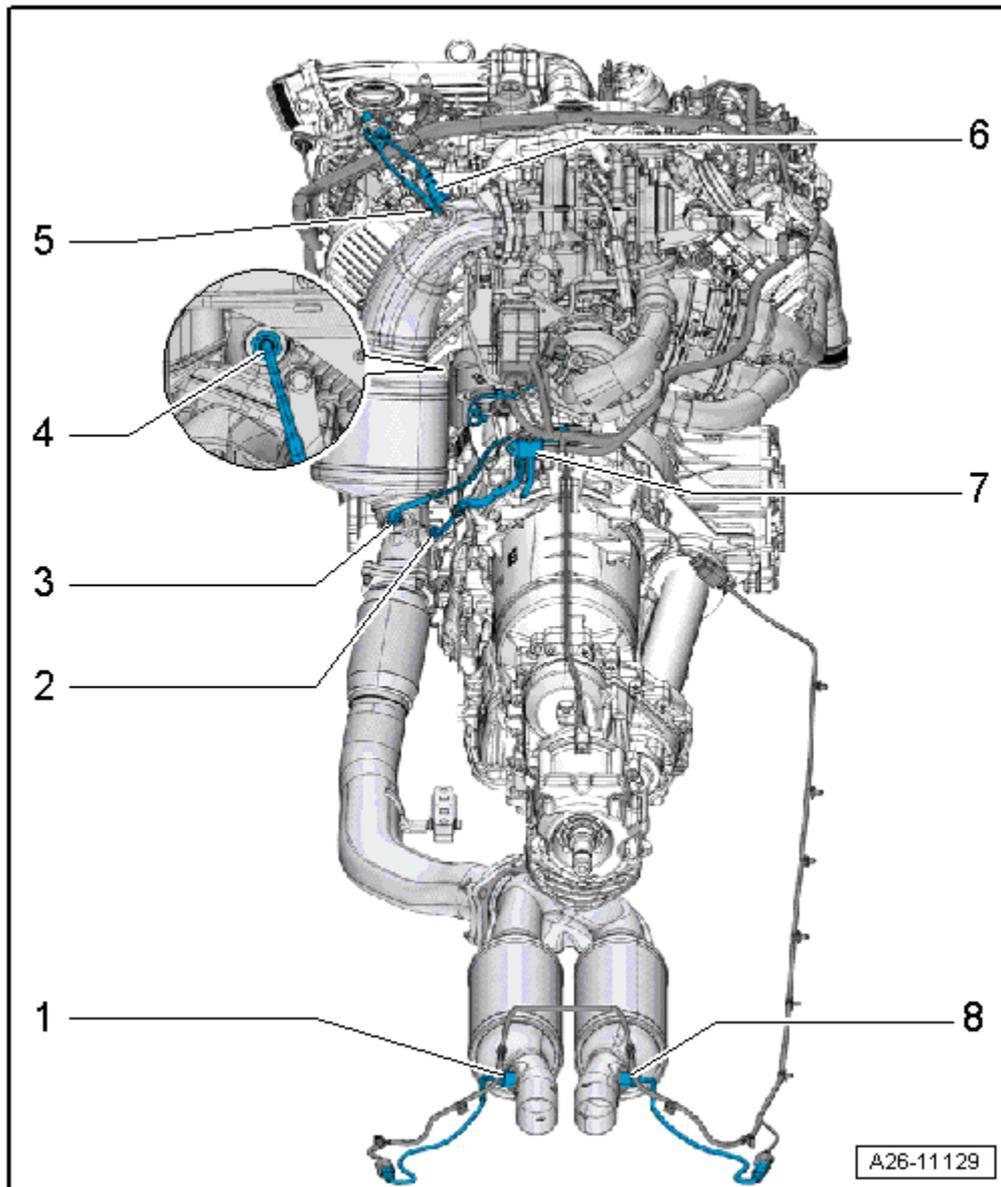

1 - Exhaust gas temperature sender 4 for cylinder bank 2 -G649-

q Removing and installing → [Chapter](#)

q Coat thread with high-temperature paste; for high-temperature paste refer to → [Electronic parts catalogue](#)

q 45 Nm

2 - Pressure pipe

q For pressure differential sender -G505-

q 45 Nm

3 - Exhaust gas temperature sender 3 -G495-

q Removing and installing → [Chapter](#)

q Coat thread with high-temperature paste; for high-temperature paste refer to → [Electronic parts catalogue](#)

q 45 Nm

4 - Exhaust gas temperature sender 1 -G235-

- q Removing and installing → [Chapter](#)
- q Coat thread with high-temperature paste; for high-temperature paste refer to → [Electronic parts catalogue](#)
- q 45 Nm
- 5 - Lambda probe -G39- with Lambda probe heater -Z19-
- q Removing and installing → [Rep. gr.23](#)
- 6 - Exhaust gas temperature sender 2 -G448-
- q Not fitted on all versions
- q Removing and installing → [Chapter](#)
- q Coat thread with high-temperature paste; for high-temperature paste refer to → [Electronic parts catalogue](#)
- q 45 Nm
- 7 - Pressure differential sender -G505-
- q Removing and installing → [Rep. gr.23](#)
- 8 - Exhaust gas temperature sender 4 -G648-
- q Removing and installing → [Chapter](#)
- q Coat thread with high-temperature paste; for high-temperature paste refer to → [Electronic parts catalogue](#)
- q 45 Nm