

Removing and installing front parking aid senders -G252-/-G253-/-G254-/-G255-

Removing

- Remove front bumper cover →Rep. gr.63.
- Press the two retaining tabs apart -arrows- and at the same time press out sender -2- from outside to inside.
- Unplug electrical connector -1- on sender.

Installing

Installation is carried out in the reverse order; note the following:

- Install front bumper cover →Rep. gr.63.

