

## Overview - parking aid (front)

### 1 - Front left sender for park assist steering on left side of vehicle -G568-

- ❑ Only on vehicles with park assist steering
- ❑ Removing and installing → Chapter

### 2 - Front left parking aid sender -G255-

- ❑ In front bumper
- ❑ Removing and installing → Chapter

### 3 - Front centre left parking aid sender - G254-

- ❑ In radiator grille
- ❑ Removing and installing → Chapter

### 4 - Front centre right parking aid sender - G253-


- ❑ In radiator grille
- ❑ Removing and installing → Chapter

### 5 - Front right parking aid sender -G252-

- ❑ In front bumper
- ❑ Removing and installing → Chapter

### 6 - Front right sender for park assist steering on right side of vehicle -G569-

- ❑ Only on vehicles with park assist steering
- ❑ Removing and installing → Chapter

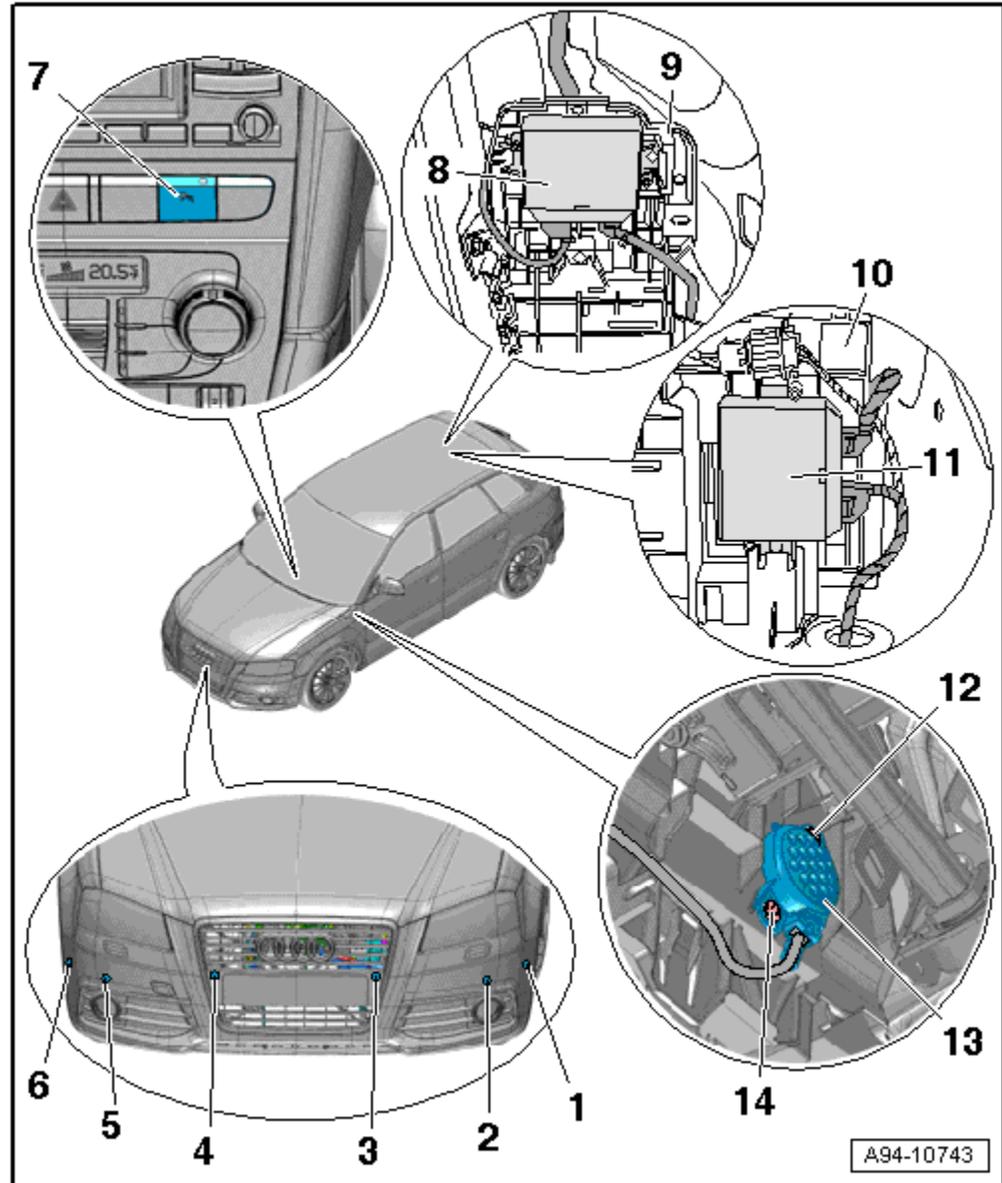

**7 - Parking aid button -E266-**

- Only for 8-channel parking aid
- Removing and installing → [Chapter](#)

**8 - Parking aid control unit -J446- - three-door vehicle**

- Removing and installing → [Chapter](#)

**9 - Bracket**

- For parking aid control unit -J446- - three-door vehicle

**10 - Bracket**

- For parking aid control unit -J446- - Sportback

**11 - Parking aid control unit -J446- - Sportback**

- Removing and installing → [Chapter](#)

**12 - Fastener****13 - Front parking aid warning buzzer -H22-**

- At central tube for dash panel behind driver's side storage compartment
- Removing and installing → [Chapter](#)

**14 - Fastener**