

Removing and installing front park assist steering senders -G568-/-G569-

Removing

- Remove front wheel housing liner →Rep. gr.66.
- Unplug electrical connector -2-.
- Release retaining clip -3- and open.
- Press out front sender -1- for park assist steering from outside to inside.

Installing

Installation is carried out in the reverse order; note the following:

- Install front wheel housing liner →Rep. gr.66.

