

Removing and installing parking aid control unit -J446- - three-door vehicle

- When renewing control unit select “Replacement” function for appropriate control unit in “Guided Fault Finding” or “Guided Functions” → [Vehicle diagnostic tester](#).

Removing

- Switch off ignition and take out ignition key.
- Remove right luggage compartment side trim → [Rep. gr.70](#).
- Unplug electrical connectors -1- and -2-.
- Release clip -arrow- and remove parking aid control unit -J446--item 3- from mounting frame.

Installing

Install in reverse order, paying attention to the following:

Parking aid control unit -J446- must be re-encoded after renewing → [Vehicle diagnostic tester](#).

- Install luggage compartment side trim (right -side) → [Rep. gr.70](#).

