

Overview - parking aid (rear)

1 - Parking aid control unit - J446- - three-door vehicle

- Removing and installing → Chapter

2 - Bracket

- For parking aid control unit -J446- - three-door vehicle

3 - Rear right parking aid sender -G206-


- Removing and installing → Chapter

4 - Rear centre right parking aid sender - G205-

- Removing and installing → Chapter

5 - Rear centre left parking aid sender - G204-

- Removing and installing → Chapter

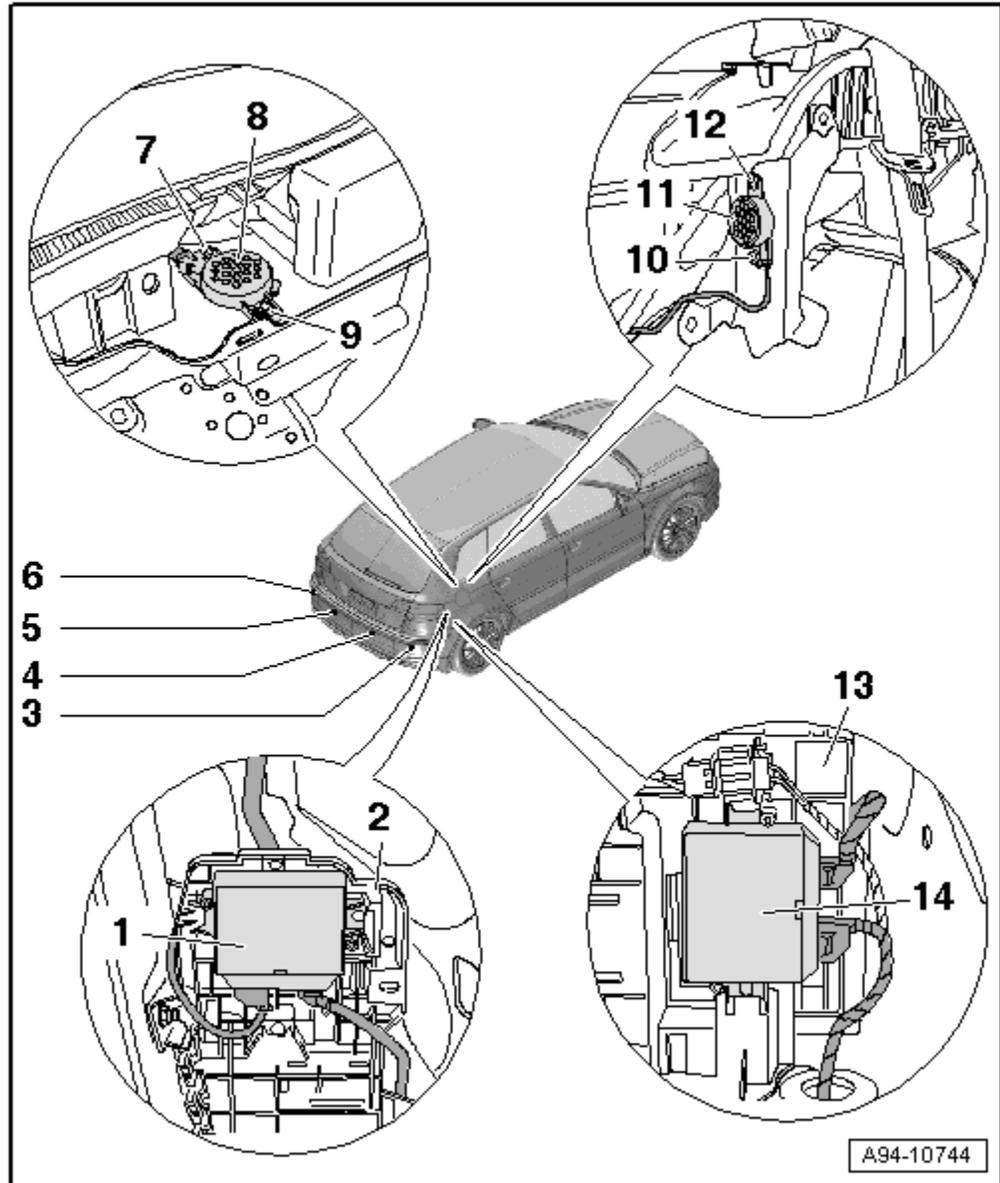

6 - Rear left parking aid sender -G203-

- Removing and installing → Chapter

7 - Fastener

8 - Rear parking aid warning buzzer -H15- - Sportback

- Removing and installing → Chapter

9 - Fastener

10 - Fastener

11 - Rear parking aid warning buzzer -H15- - three-door vehicle

- Removing and installing → [Chapter](#)

12 - Fastener

13 - Bracket

- For parking aid control unit -J446- - Sportback

14 - Parking aid control unit -J446- - Sportback

- Removing and installing → [Chapter](#)