

## Removing and installing rear parking aid warning buzzer -H15- - three-door vehicle

Fitting location: under seat belt guide (rear right)

### Removing

- Switch off ignition and take out ignition key.
- Remove rear right side trim →Rep. gr.70.
- Unplug electrical connector -3-.
- Unscrew bolts -1- and remove rear parking aid warning buzzer -H15--item 2-.

### Installing

Install in reverse order, paying attention to the following:

- Install rear right side trim →Rep. gr.70.

