

Removing and installing front parking aid warning buzzer -H22- - 8-channel parking aid

Removing

- Switch off ignition and take out ignition key.
- Remove dash panel cover (driver's side)
→Rep. gr.68.
- Remove bolts -arrows- and detach front parking aid warning buzzer -H22--item 1-.
- Unplug electrical connector -2-.

Installing

Installation is carried out in the reverse order; note the following:

- Install dash panel cover (driver's side)
→Rep. gr.68.

