

Removing and installing A-pillar trim (top)

Special tools and workshop equipment required

- ♦ Removal lever -80-200-


Removing



WARNING


Observe safety regulations for working on airbags → *Chapter*.

80-200

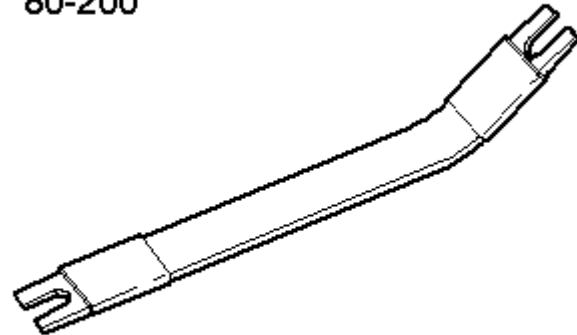


W00-0353

- Pull A-pillar trim -item 3- off A-pillar by hand at rubber seal, so that you can apply removal lever -80-200- at upper retaining clip -2-.
- Use removal lever -80-200- to press first clip -1- and then clip -2- out of A-pillar as far as the limit stop.
- Lift out A-pillar trim -item 1--arrow-.
- The retaining clips will then be fully released from the guide in the A-pillar.

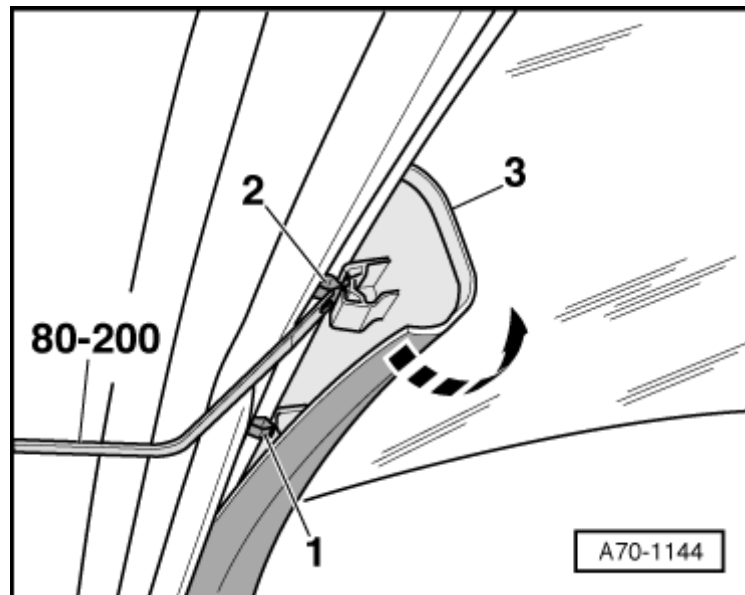

A70-1144

- Unplug electrical connector for loudspeaker.

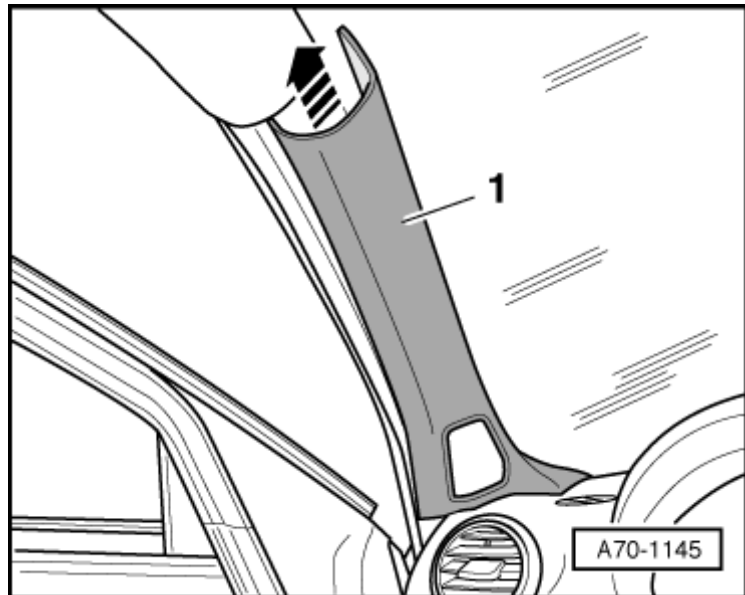

Installing

Installation is carried out in the reverse order; note the following:

- Slide A-pillar trim into guide at dash panel.
- When fitting A-pillar trim, make sure guide pin -2- beneath upper retaining clip -1- can also be inserted in groove on A-pillar.



Note

- ♦ *If guide pin is not inserted in groove, A-pillar trim cannot be fully pressed on.*
- ♦ *Make sure seal is correctly positioned after fitting trim.*

