


4.2l petrol engine , CAUA


From May 2008

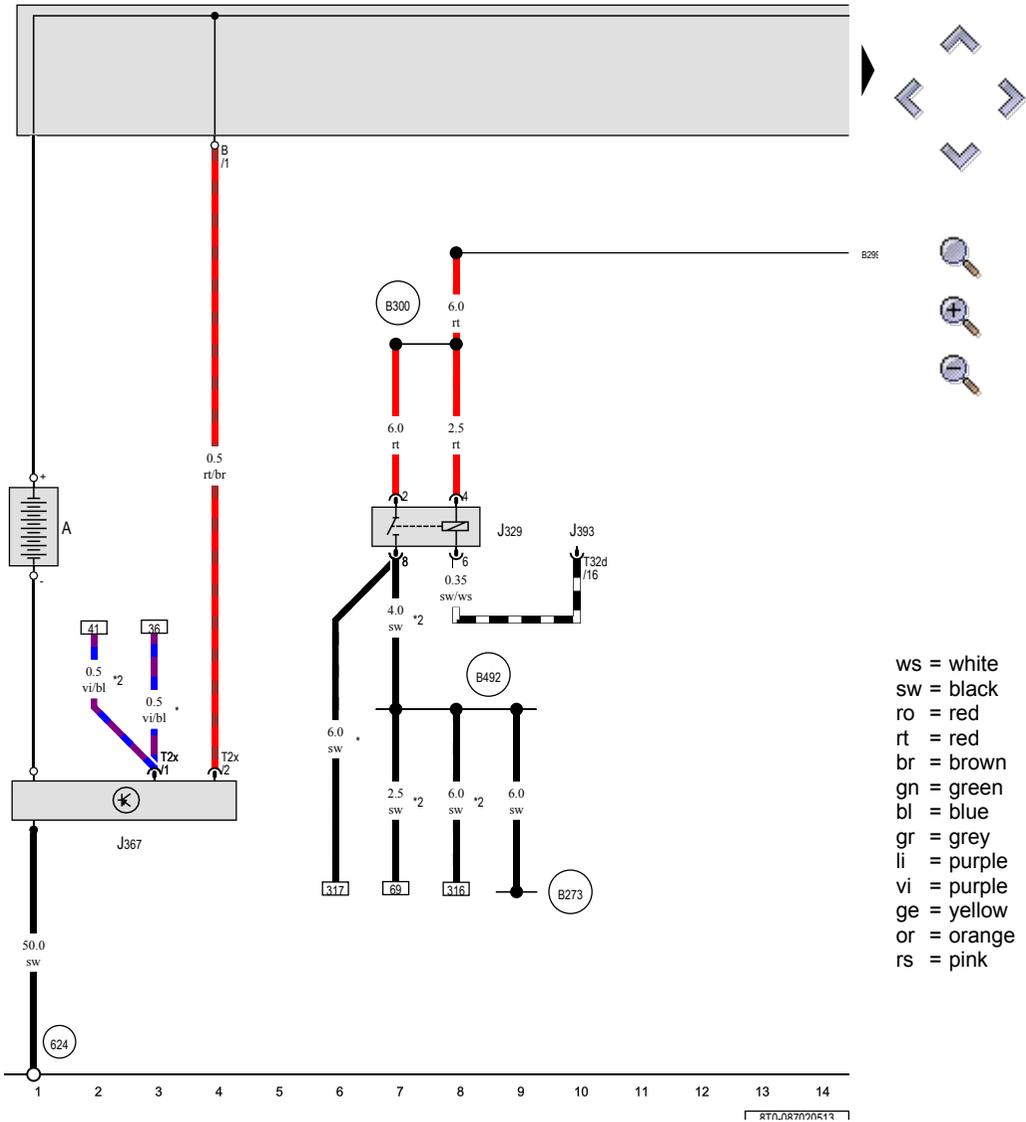

Battery, Terminal 15 voltage supply relay, Battery monitor control unit


- A - Battery
- J329 - Terminal 15 voltage supply relay
- J367 - Battery monitor control unit
- J393 - Convenience system central control unit
- T2x - 2-pin connector
- T32d - 32-pin connector
- 624 - Earth point, starter battery
- B273 - Positive connection (15), in main wiring harness
- B299 - Positive connection 3 (30), in main wiring harness
- B300 - Positive connection 4 (30), in main wiring harness
- B492 - Positive connection 3 (15), in interior wiring harness
- * - From May 2009
- *2 - Up to April 2009

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

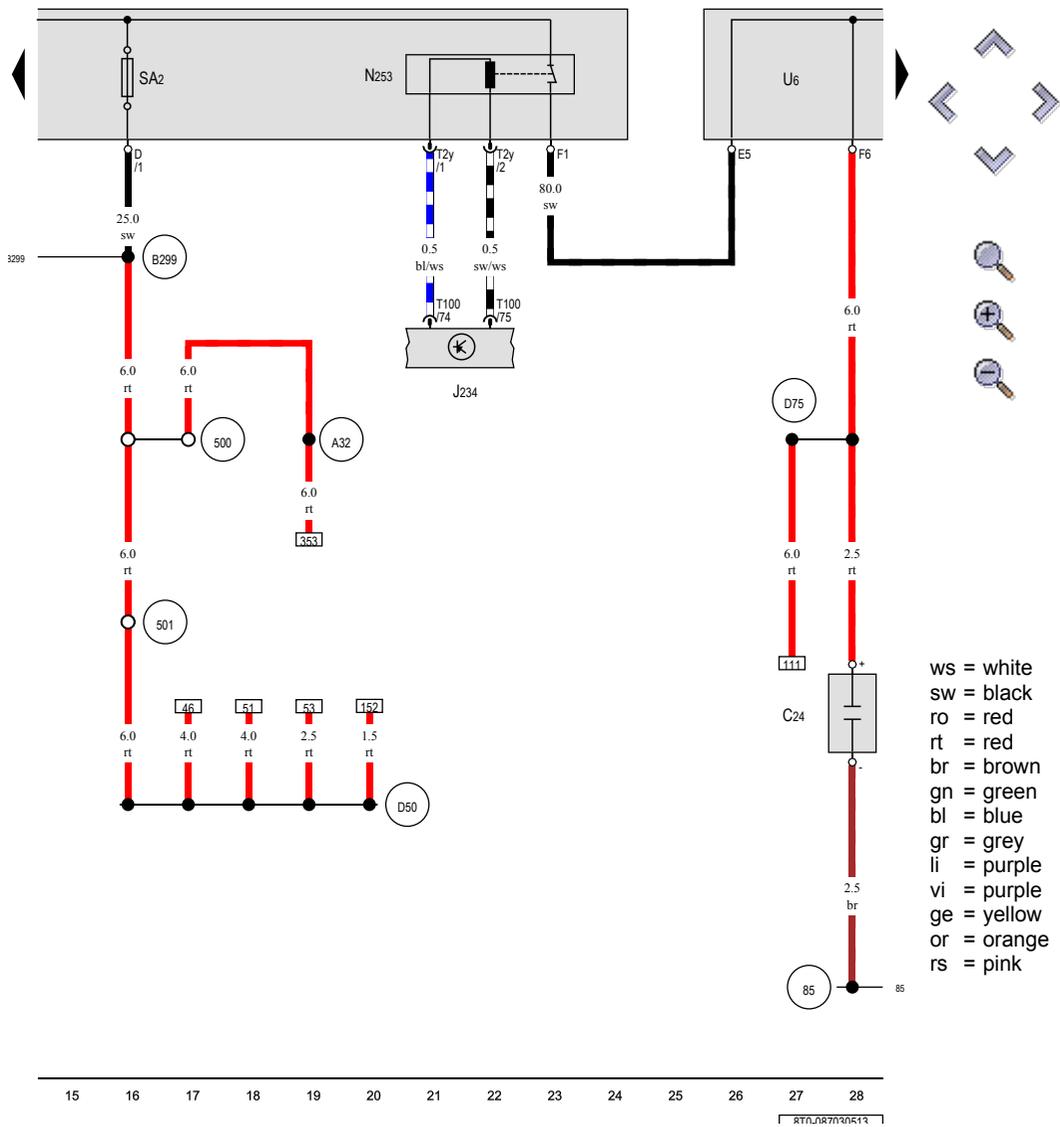

Battery isolation igniter, Jump start socket


- C24 - Suppression filter
- J234 - Airbag control unit
- N253 - Battery isolation igniter
- SA2 - Fuse 2 in fuse holder A
- T2y - 2-pin connector
- T100 - 100-pin connector
- U6 - Jump start socket
- 85 - Earth connection 1, in engine compartment wiring harness
- 500 - Threaded connection 1 (30), on relay plate
- 501 - Threaded connection 2 (30), on relay plate
- A32 - Positive connection 3 (30), in dash panel wiring harness
- B299 - Positive connection 3 (30), in main wiring harness
- D50 - Positive connection 3 (30), in engine compartment wiring harness
- D75 - Positive connection 2 (30), in engine compartment wiring harness

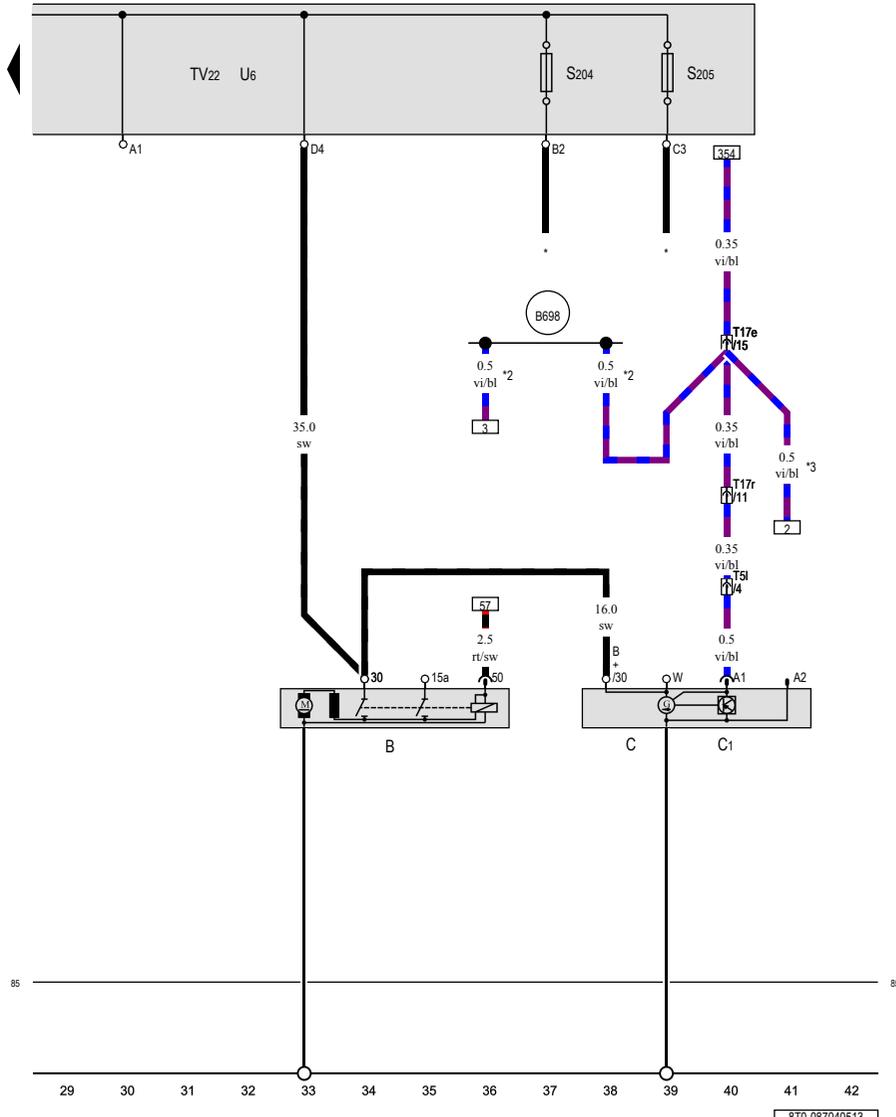


Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket

- B - Starter
- C - Alternator
- C1 - Voltage regulator
- S204 - Fuse 1 (30)
- S205 - Fuse 2 (30)
- T5l - 5-pin connector, in engine compartment
- T17e - 17-pin connector, red
- T17r - 17-pin connector, white
- TV22 - Terminal 30 wiring junction 2
- U6 - Jump start socket
- 85 - Earth connection 1, in engine compartment wiring harness
- B698 - Connection 3 (LIN bus) in main wiring harness
- * - see applicable current flow diagram for radiator fan
- *2 - From May 2009
- *3 - Up to April 2009

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

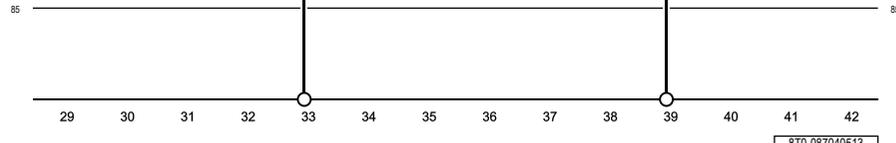


87L6R7J4R13

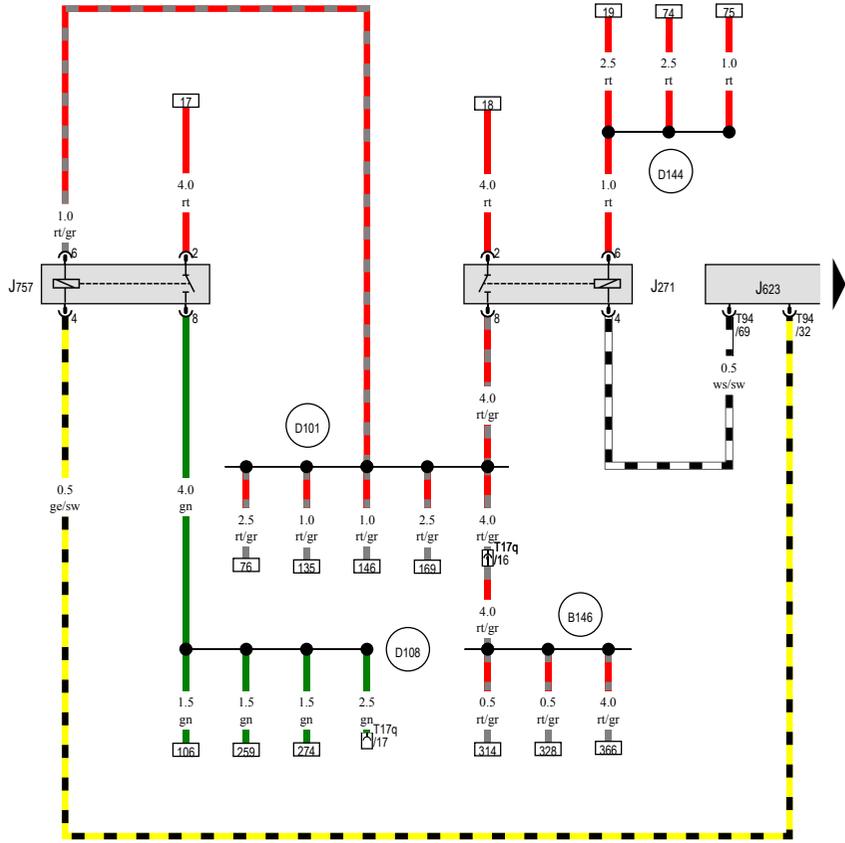

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

- Main relay, Engine control unit, Engine component current supply relay**
- J271 - Main relay
 - J623 - Engine control unit
 - J757 - Engine component current supply relay
 - T17q - 17-pin connector, red
 - T94 - 94-pin connector
 - 85 - Earth connection 1, in engine compartment wiring harness
 - B146 - Positive connection 1 (87), in interior wiring harness
 - D101 - Connection 1 in engine compartment wiring harness
 - D108 - Connection 6 in engine compartment wiring harness
 - D144 - Positive connection 5 (30), in engine compartment wiring harness




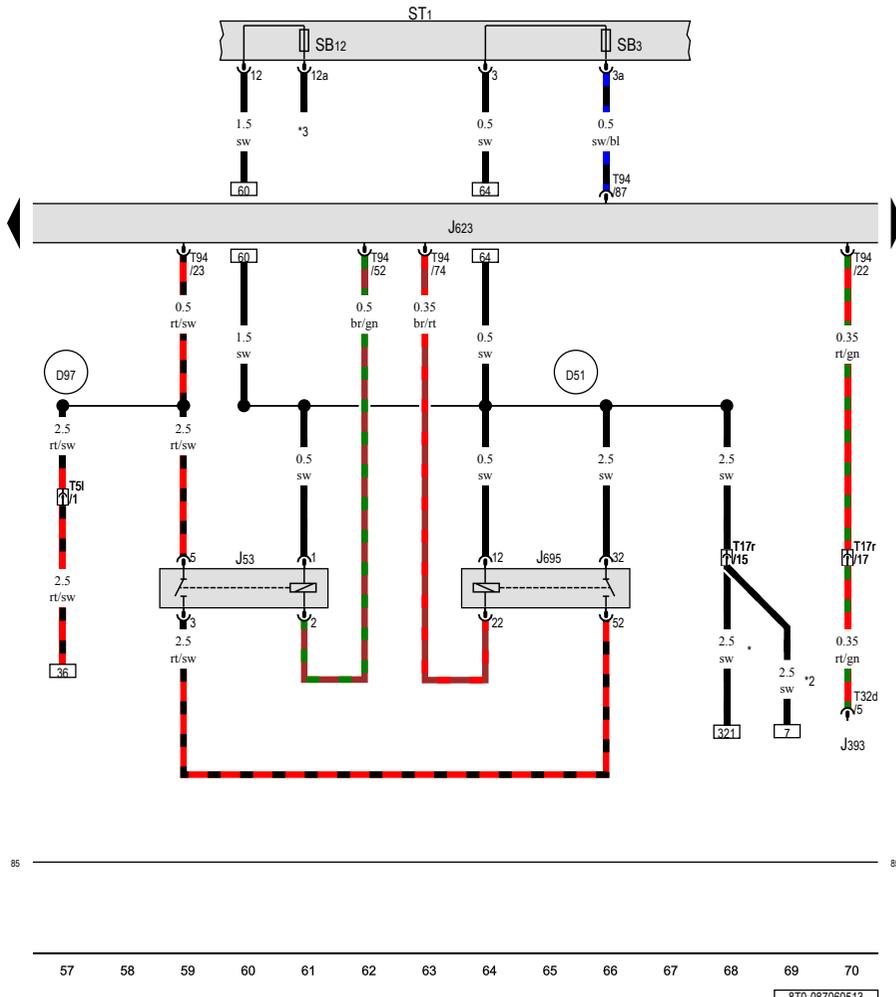

Starter motor relay, Engine control unit, Starter motor relay 2

- J53 - Starter motor relay
- J393 - Convenience system central control unit
- J623 - Engine control unit
- J695 - Starter motor relay 2
- ST1 - Fuse carrier 1
- SB3 - Fuse 3 on fuse holder B
- SB12 - Fuse 12 on fuse holder B
- T51 - 5-pin connector, in engine compartment
- T17r - 17-pin connector, white
- T32d - 32-pin connector
- T94 - 94-pin connector
- 85 - Earth connection 1, in engine compartment wiring harness
- D51 - Positive connection 1 (15), in engine compartment wiring harness
- D97 - Connection (50), in engine compartment right wiring harness
- * - From May 2009
- *2 - Up to April 2009
- *3 - see applicable current flow diagram for automatic gearbox

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

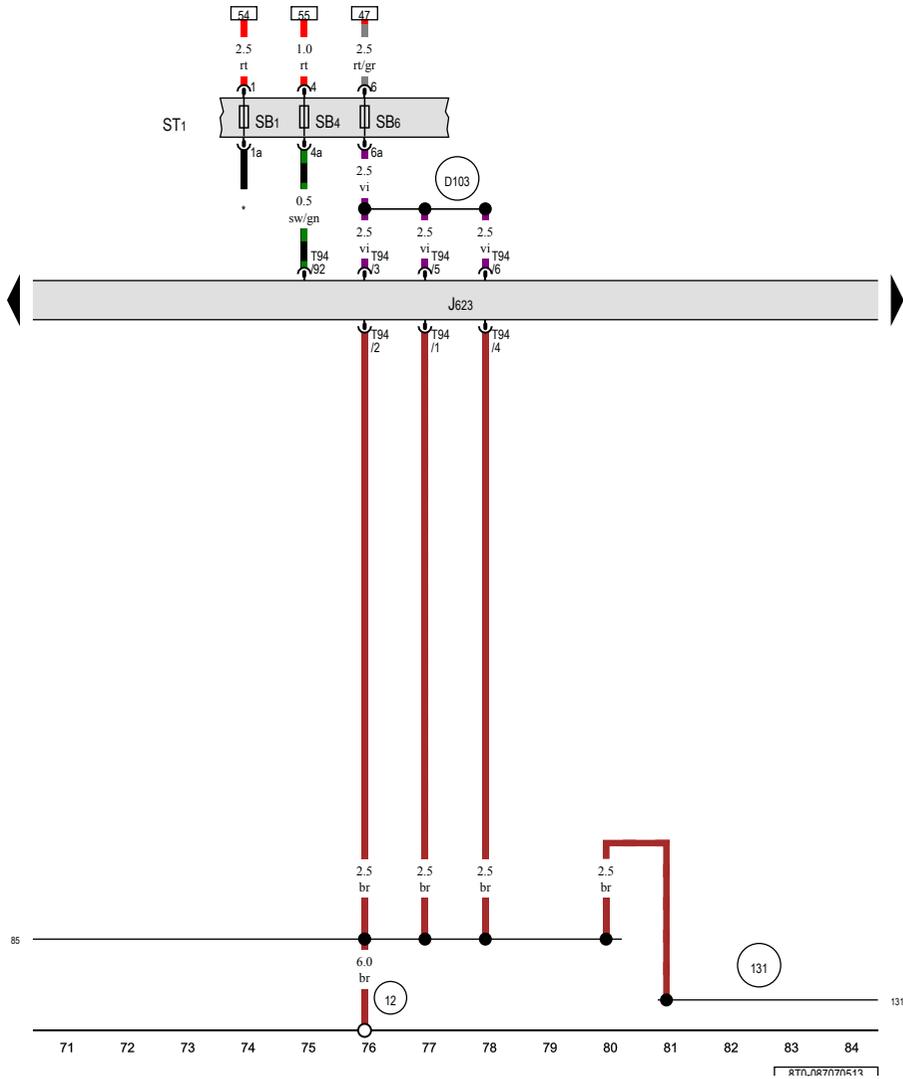


Engine control unit

- J623 - Engine control unit
- ST1 - Fuse carrier 1
- SB1 - Fuse 1 on fuse holder B
- SB4 - Fuse 4 on fuse holder B
- SB6 - Fuse 6 on fuse holder B
- T94 - 94-pin connector
- 12 - Earth point, on left in engine compartment
- 85 - Earth connection 1, in engine compartment wiring harness
- 131 - Earth connection 2, in engine compartment wiring harness
- D103 - Connection 3 in engine compartment wiring harness
- * - see applicable current flow diagram for automatic gearbox

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink


87LNR7070R13

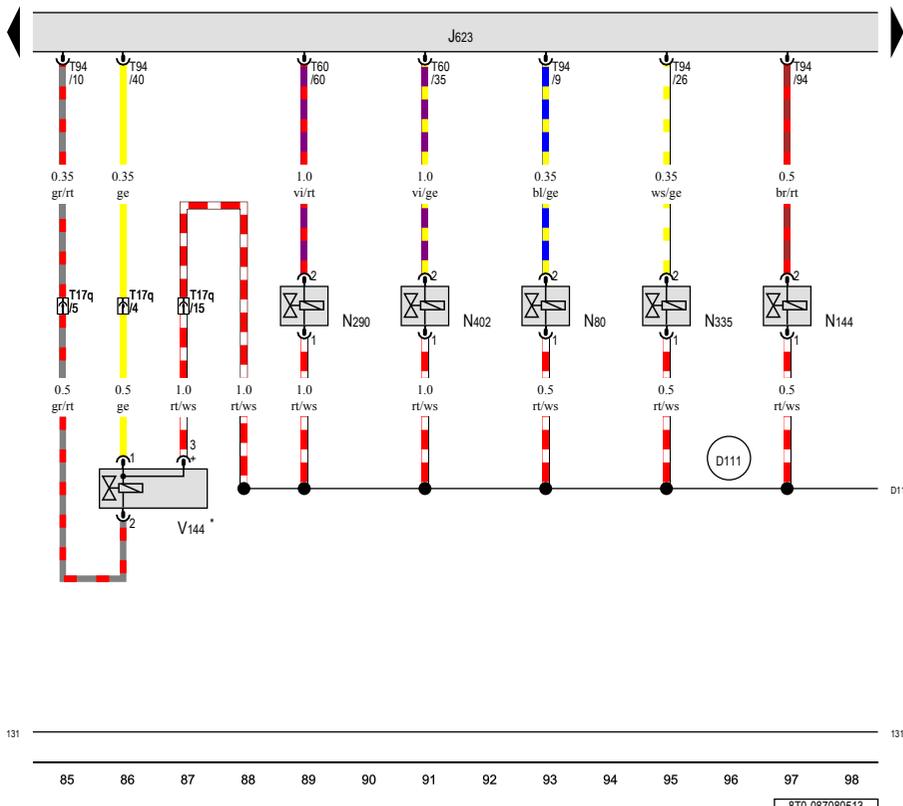

Engine control unit, Activated charcoal filter solenoid valve 1, Left electrohydraulic engine mounting solenoid valve, Fuel metering valve, Variable intake manifold changeover valve, Fuel metering valve 2, Fuel system diagnostic pump

- J623 - Engine control unit
- N80 - Activated charcoal filter solenoid valve 1
- N144 - Left electrohydraulic engine mounting solenoid valve
- N290 - Fuel metering valve
- N335 - Variable intake manifold changeover valve
- N402 - Fuel metering valve 2
- T17q - 17-pin connector, red
- T60 - 60-pin connector
- T94 - 94-pin connector
- V144 - Fuel system diagnostic pump
- 131 - Earth connection 2, in engine compartment wiring harness
- D111 - Connection 9 in engine compartment wiring harness
- * - Only models with US equipment



ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

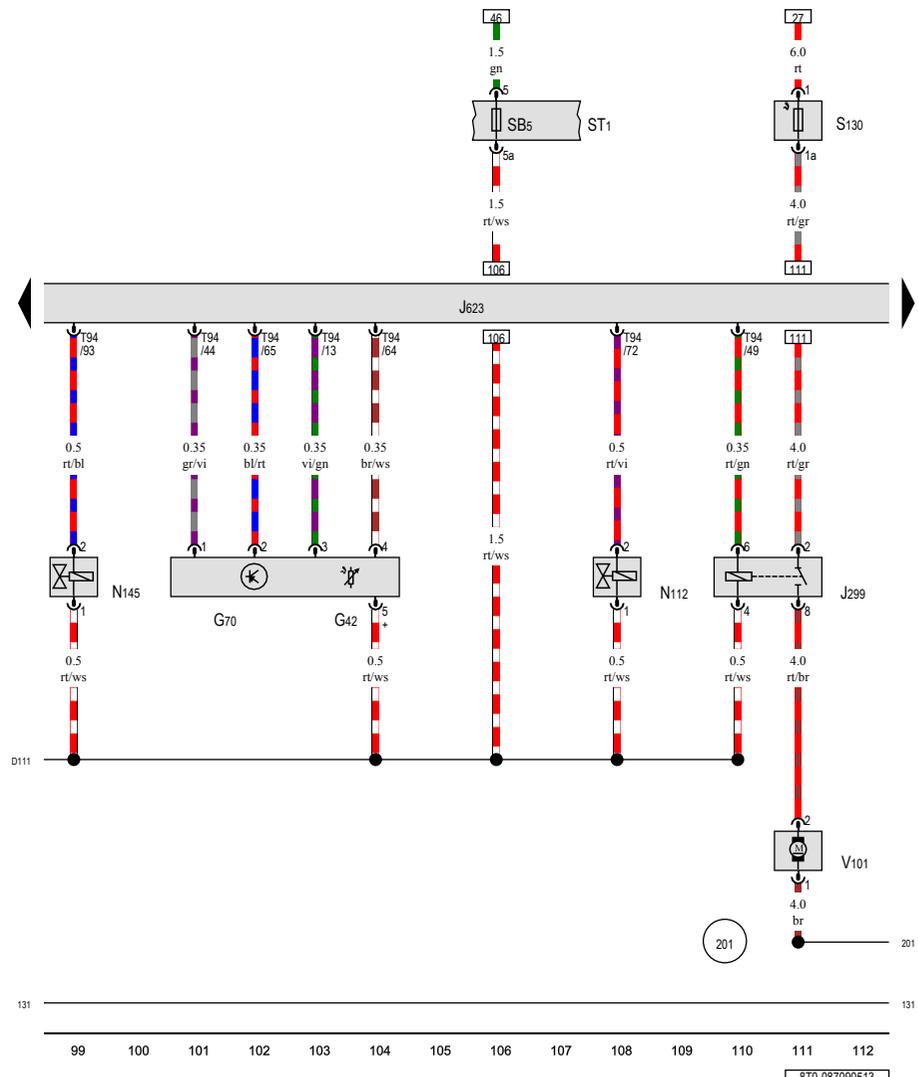


Air mass meter, Secondary air pump relay, Engine control unit, Right electrohydraulic engine mounting solenoid valve, Secondary air pump motor

- G42 - Intake air temperature sender
- G70 - Air mass meter
- J299 - Secondary air pump relay
- J623 - Engine control unit
- N112 - Secondary air inlet valve
- N145 - Right electrohydraulic engine mounting solenoid valve
- ST1 - Fuse carrier 1
- SB5 - Fuse 5 on fuse holder B
- S130 - Secondary air pump fuse
- T94 - 94-pin connector
- V101 - Secondary air pump motor
- 131 - Earth connection 2, in engine compartment wiring harness
- 201 - Earth connection 5, in engine compartment wiring harness
- D111 - Connection 9 in engine compartment wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

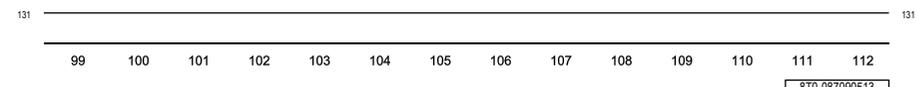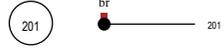


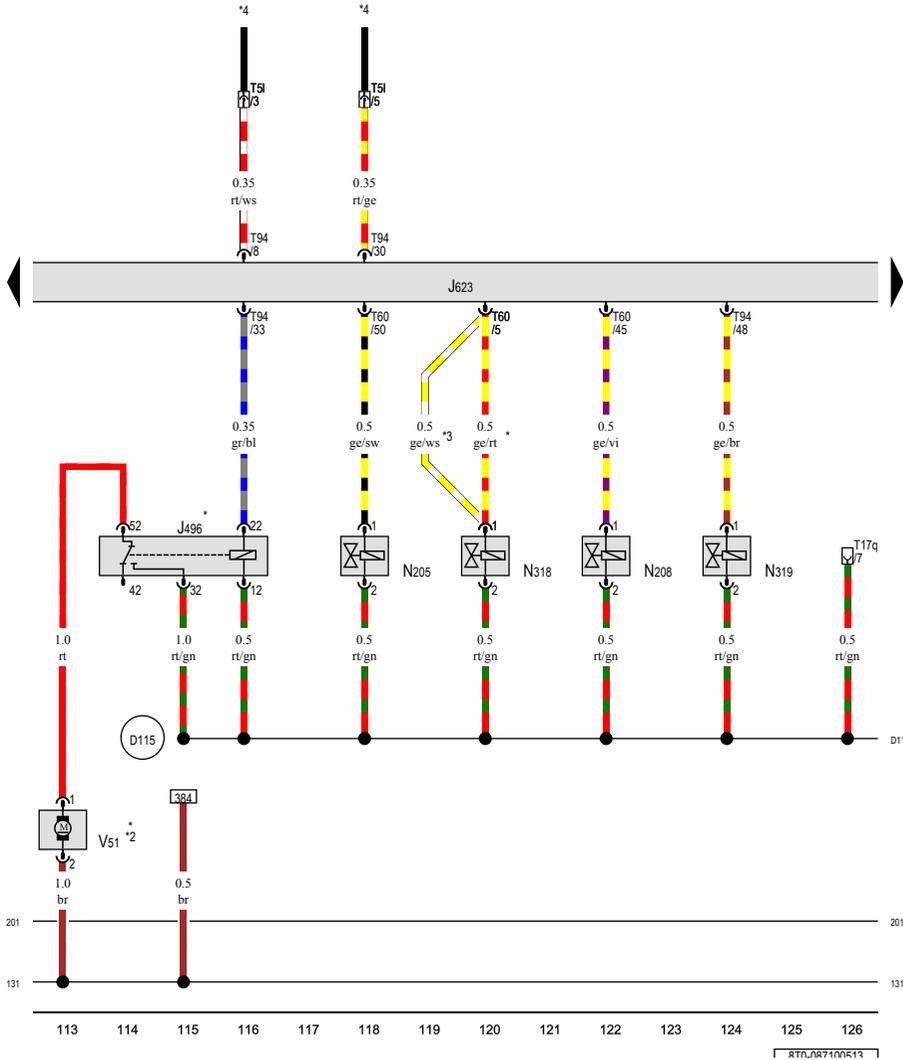

Additional coolant pump relay, Engine control unit, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2, Continued coolant circulation pump

- J496 - Additional coolant pump relay
- J623 - Engine control unit
- N205 - Camshaft control valve 1
- N208 - Camshaft control valve 2
- N318 - Exhaust camshaft control valve 1
- N319 - Exhaust camshaft control valve 2
- T51 - 5-pin connector
- T17q - 17-pin connector, red
- T60 - 60-pin connector
- T94 - 94-pin connector
- V51 - Continued coolant circulation pump
- 131 - Earth connection 2, in engine compartment wiring harness
- 201 - Earth connection 5, in engine compartment wiring harness
- D115 - Connection 13 in engine compartment wiring harness
- * - Gradually discontinued
- *2 - Only for countries with hot climate
- *3 - gradual introduction
- *4 - see applicable current flow diagram for radiator fan


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

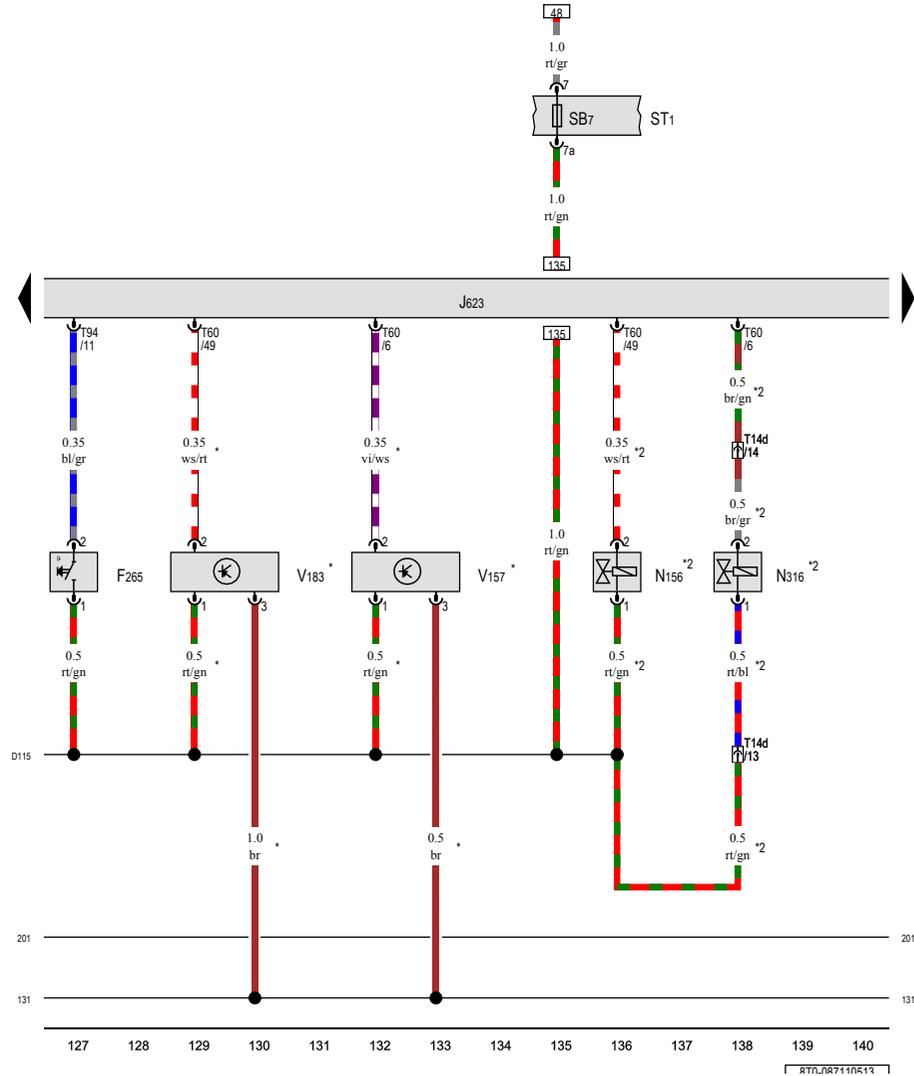

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Map-controlled engine cooling system thermostat, Engine control unit, Intake manifold flap valve, Intake manifold flap motor, Variable intake manifold motor

- F265 - Map-controlled engine cooling system thermostat
- J623 - Engine control unit
- N156 - Variable intake manifold changeover valve
- N316 - Intake manifold flap valve
- ST1 - Fuse carrier 1
- SB7 - Fuse 7 on fuse holder B
- T14d - 14-pin connector, in engine compartment
- T60 - 60-pin connector
- T94 - 94-pin connector
- V157 - Intake manifold flap motor
- V183 - Variable intake manifold motor
- 131 - Earth connection 2, in engine compartment wiring harness
- 201 - Earth connection 5, in engine compartment wiring harness
- D115 - Connection 13 in engine compartment wiring harness
- * - Gradually discontinued
- *2 - gradual introduction

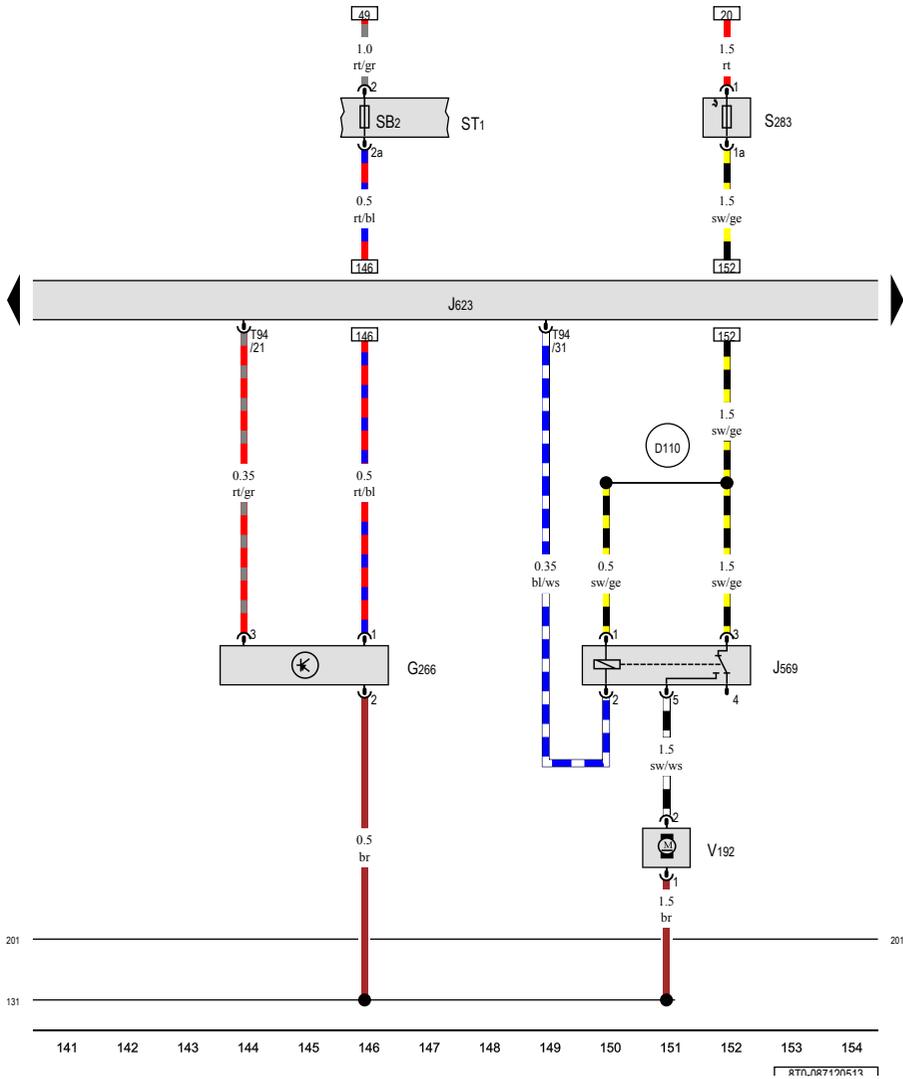



Oil level and oil temperature sender, Brake servo relay, Engine control unit, Vacuum pump for brakes

- G266 - Oil level and oil temperature sender
- J569 - Brake servo relay
- J623 - Engine control unit
- ST1 - Fuse carrier 1
- SB2 - Fuse 2 on fuse holder B
- S283 - Brake vacuum pump fuse
- T94 - 94-pin connector
- V192 - Vacuum pump for brakes
- 131 - Earth connection 2, in engine compartment wiring harness
- 201 - Earth connection 5, in engine compartment wiring harness
- D110 - Connection 8 in engine compartment wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage


- J623 - Engine control unit 
- N70 - Ignition coil 1 with output stage
- N127 - Ignition coil 2 with output stage
- N291 - Ignition coil 3 with output stage
- N292 - Ignition coil 4 with output stage
- P - Spark plug connector
- Q - Spark plugs
- T60 - 60-pin connector 
- T94 - 94-pin connector 
- 167 - Earth connection 4, in engine compartment wiring harness
- 201 - Earth connection 5, in engine compartment wiring harness
- 600 - Earth point, on right cylinder head
- 615 - Earth point, on left suspension strut 
- D121 - Connection 19 in engine compartment wiring harness
- D122 - Connection 20 in engine compartment wiring harness

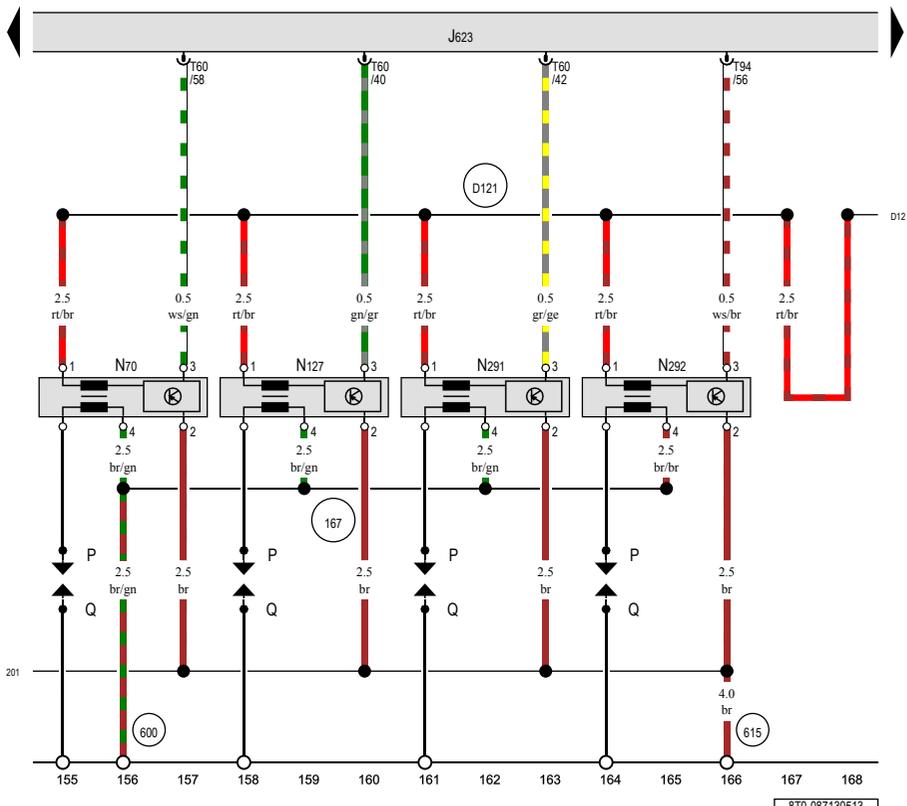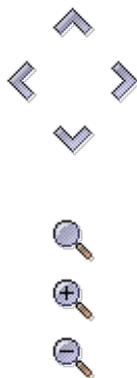

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

201

RTNLR7130R13

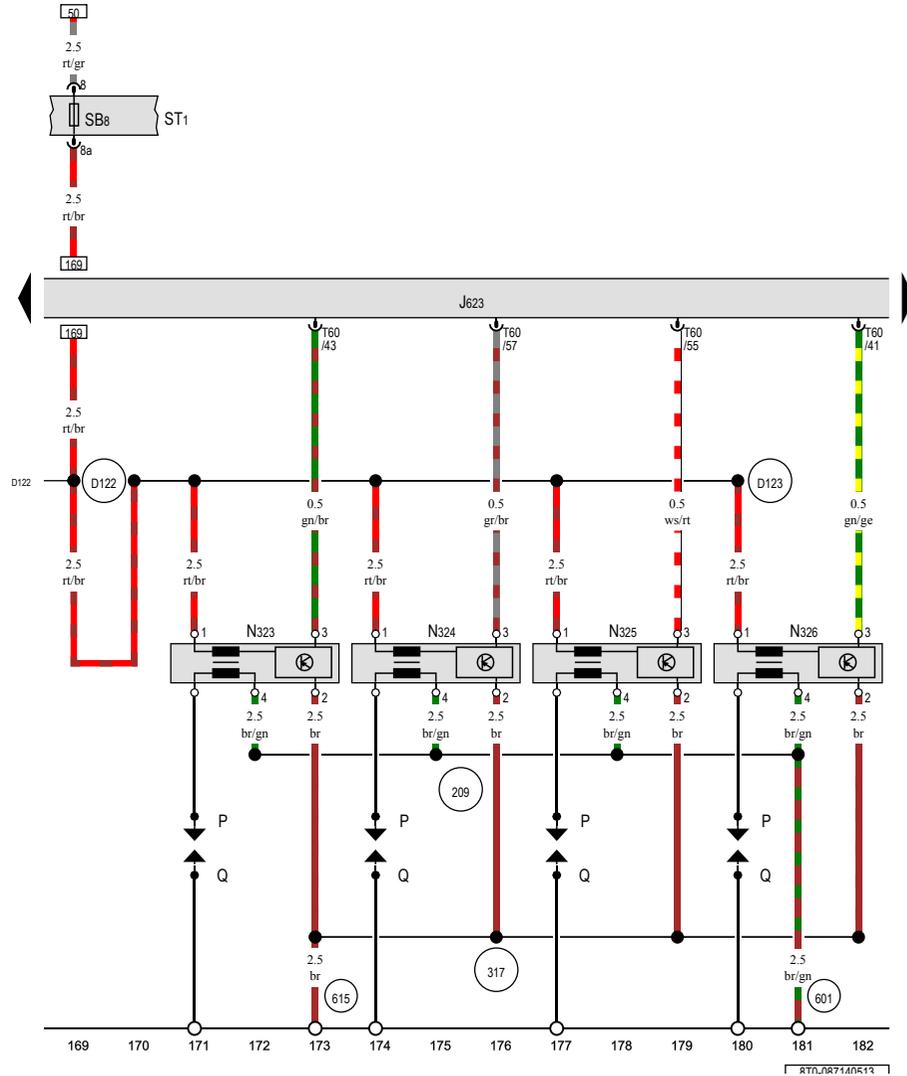


Engine control unit, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage

- J623 - Engine control unit
- N323 - Ignition coil 5 with output stage
- N324 - Ignition coil 6 with output stage
- N325 - Ignition coil 7 with output stage
- N326 - Ignition coil 8 with output stage
- P - Spark plug connector
- Q - Spark plugs
- ST1 - Fuse carrier 1
- SB8 - Fuse 8 on fuse holder B
- T60 - 60-pin connector
- 209 - Earth connection 6, in engine compartment wiring harness
- 317 - Earth connection 7, in engine compartment wiring harness
- 601 - Earth point, on left cylinder head
- 615 - Earth point, on left suspension strut
- D122 - Connection 20 in engine compartment wiring harness
- D123 - Connection 21 in engine compartment wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

87LNR714NR13

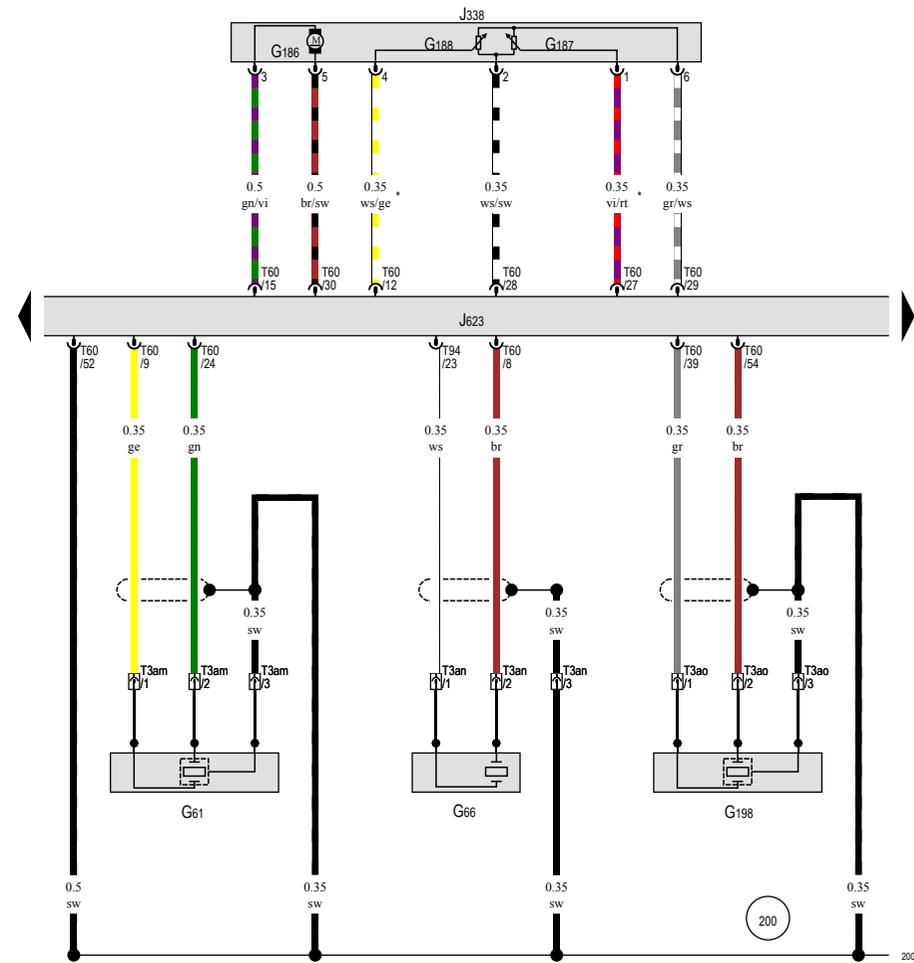


Knock sensor 1, Knock sensor 2, Knock sensor 3, Throttle valve module, Engine control unit

- G61 - Knock sensor 1
- G66 - Knock sensor 2
- G186 - Throttle valve drive for electric throttle
- G187 - Throttle valve drive angle sender 1 for electric throttle
- G188 - Throttle valve drive angle sender 2 for electric throttle
- G198 - Knock sensor 3
- J338 - Throttle valve module
- J623 - Engine control unit
- T3am - 3-pin connector, black
- T3an - 3-pin connector, brown
- T3ao - 3-pin connector, black
- T60 - 60-pin connector
- T94 - 94-pin connector
- 200 - Earth connection (screening), in engine compartment wiring harness
- * - Wiring colour depends on equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Engine speed sender, Hall sender, Knock sensor 4, Hall sender 3, Engine control unit

- G28 - Engine speed sender
- G40 - Hall sender
- G199 - Knock sensor 4
- G300 - Hall sender 3
- J623 - Engine control unit
- T3ap - 3-pin connector, brown
- T60 - 60-pin connector
- 200 - Earth connection (screening), in engine compartment wiring harness
- D141 - Connection (5V) in engine prewiring harness

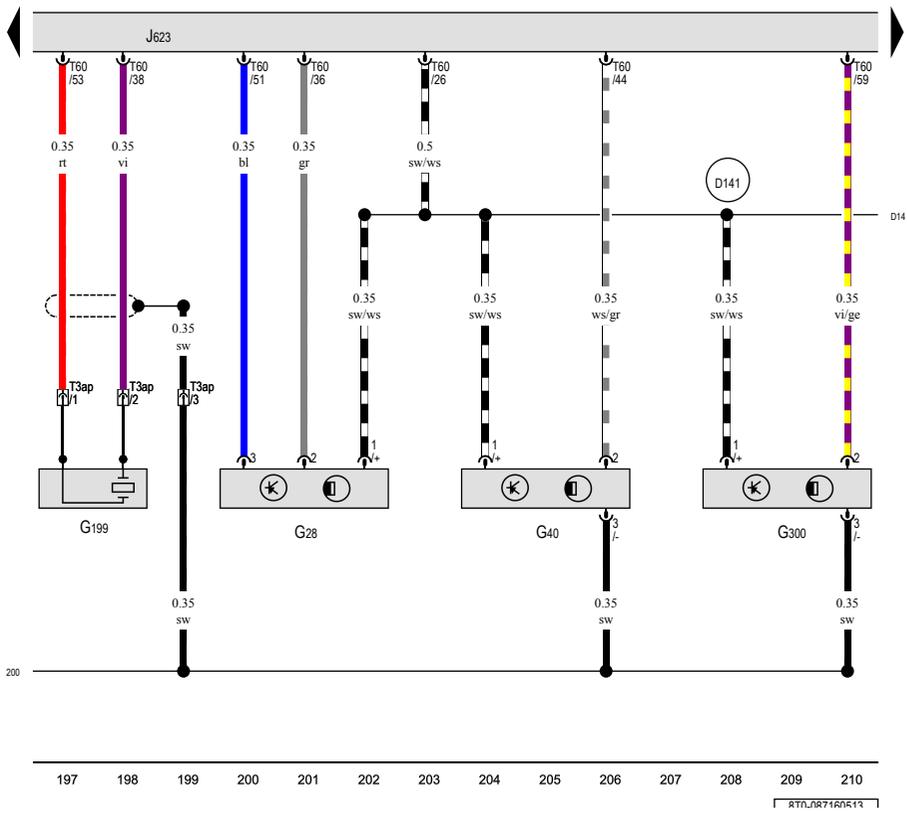


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

197 198 199 200 201 202 203 204 205 206 207 208 209 210

87LNR716R13

Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit


- G62 - Coolant temperature sender
- G247 - Fuel pressure sender
- G336 - Intake manifold flap potentiometer
- G512 - Intake manifold flap potentiometer 2
- J623 - Engine control unit
- T14c - 14-pin connector, in engine compartment
- T60 - 60-pin connector
- 220 - Earth connection (sender earth), in engine wiring harness
- D141 - Connection (5V) in engine prewiring harness

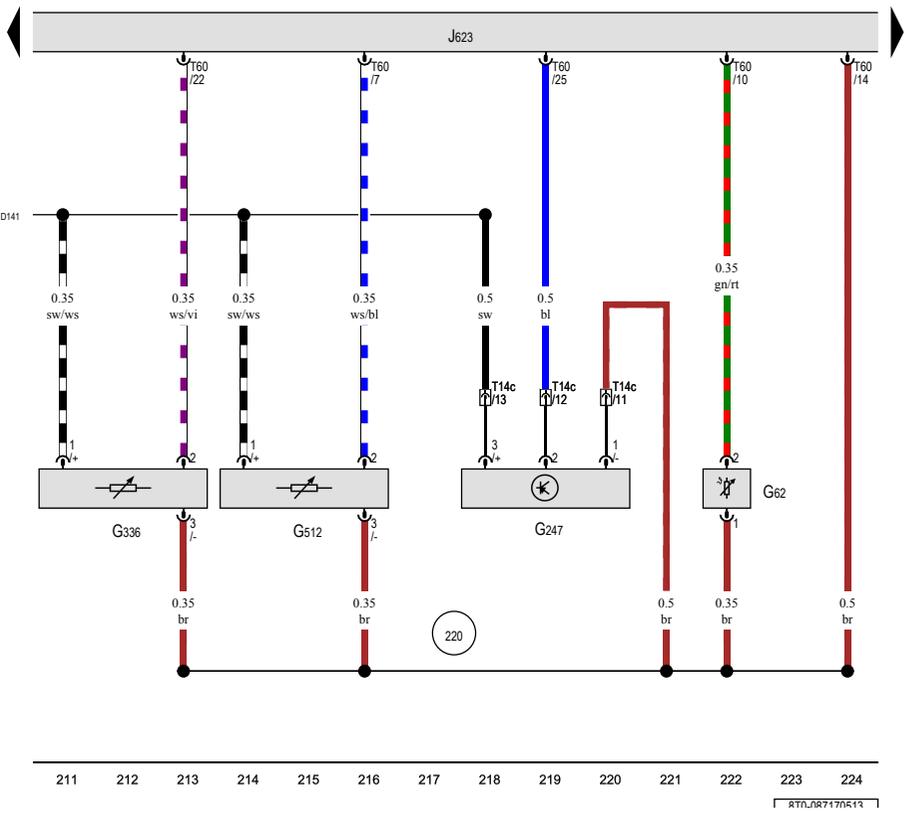

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Accelerator position sender, Engine control unit


- G79 - Accelerator position sender
- G185 - Accelerator position sender 2
- J623 - Engine control unit
- T6ag - 6-pin connector
- T17e - 17-pin connector, red
- T17r - 17-pin connector, white
- T94 - 94-pin connector
- B537 - Connection 28, in main wiring harness

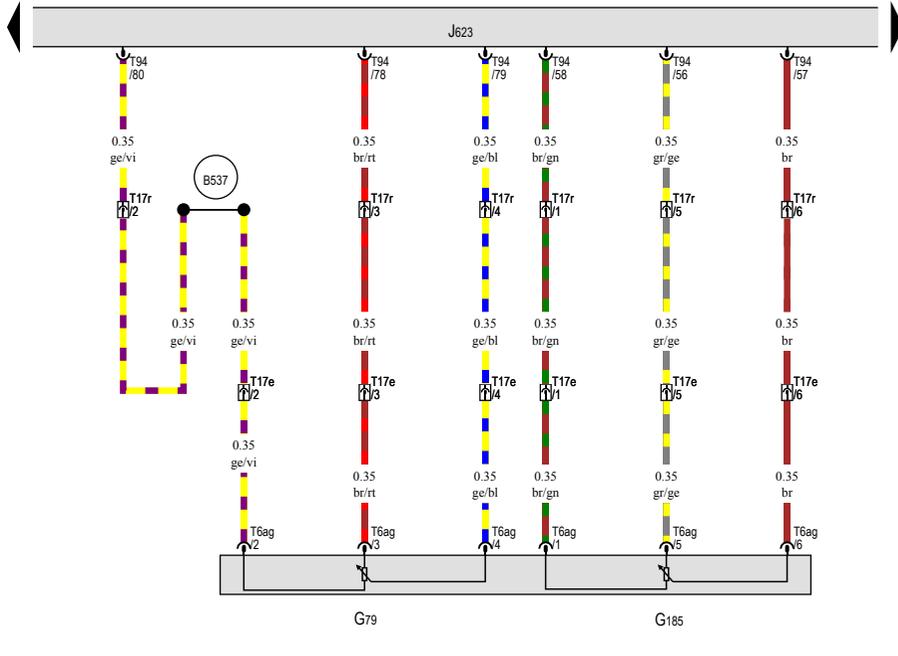

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Hall sender 2, Brake servo pressure sensor, Hall sender 4, Fuel pressure sender for low-pressure, Engine control unit


- G163 - Hall sender 2
- G294 - Brake servo pressure sensor
- G301 - Hall sender 4
- G410 - Fuel pressure sender for low-pressure
- J623 - Engine control unit
- T94 - 94-pin connector
- 327 - Earth connection (sender earth), in engine compartment wiring harness
- 328 - Earth connection 2 (sender earth), in engine compartment wiring harness
- D174 - Connection 2 (5V) in engine prewiring harness

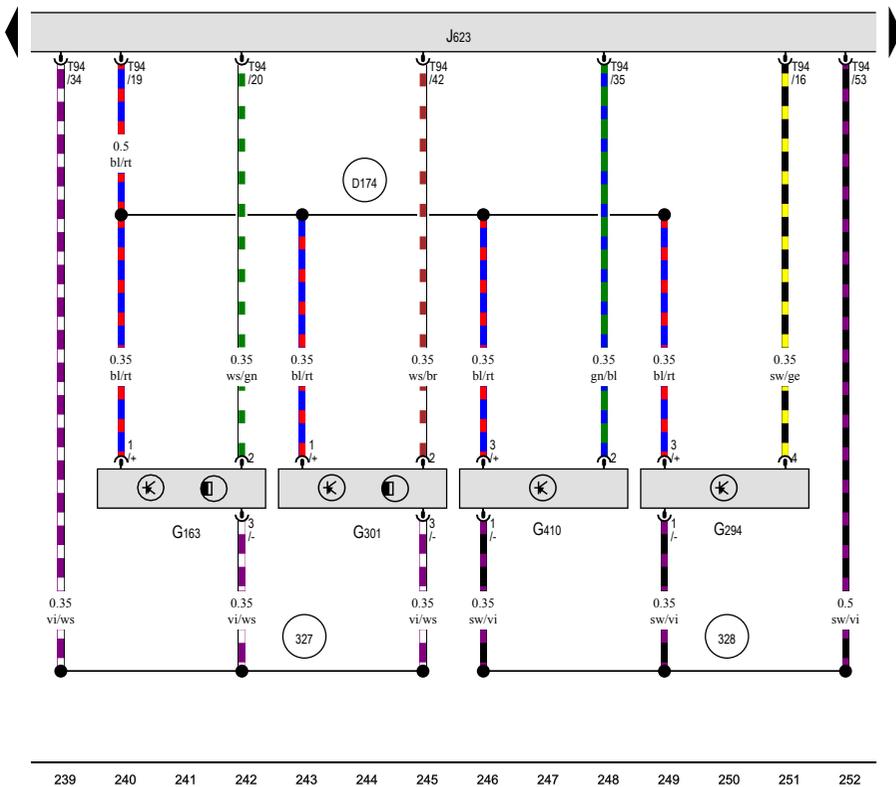

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

239 240 241 242 243 244 245 246 247 248 249 250 251 252

RTNLR710NR13

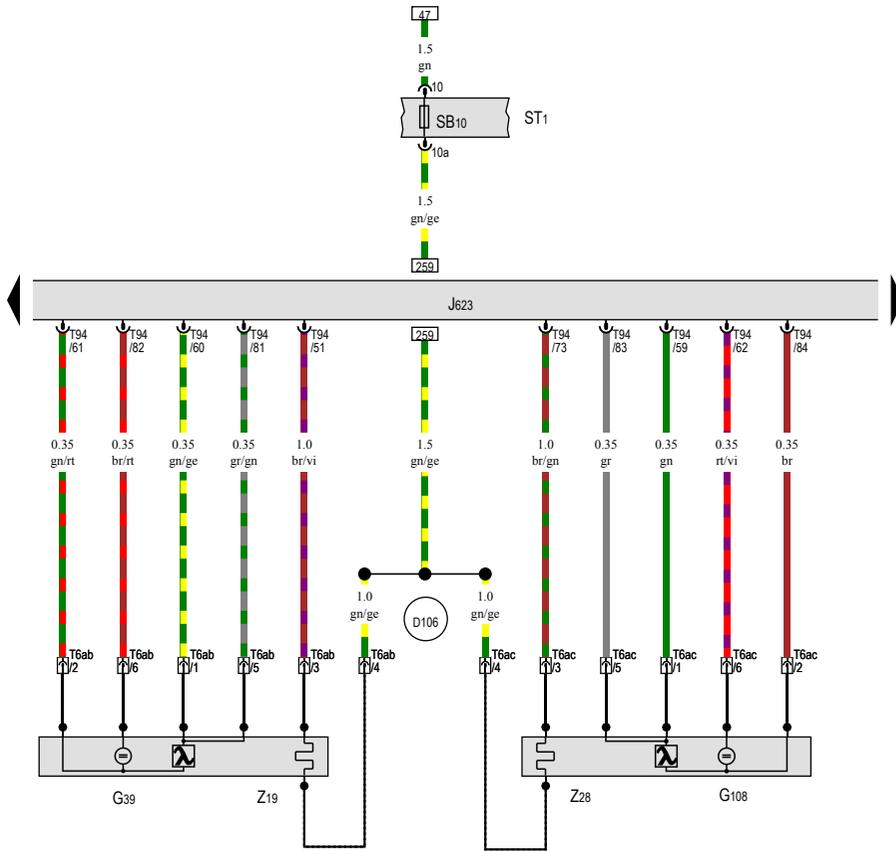


Lambda probe, Lambda probe 2, Engine control unit

- G39 - Lambda probe
- G108 - Lambda probe 2
- J623 - Engine control unit
- ST1 - Fuse carrier 1
- SB10 - Fuse 10 on fuse holder B
- T6ab - 6-pin connector, black
- T6ac - 6-pin connector, black
- T94 - 94-pin connector
- Z19 - Lambda probe heater
- Z28 - Lambda probe heater 2
- D106 - Connection 4 in engine compartment wiring harness

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit


- G130 - Lambda probe after catalytic converter
- G131 - Lambda probe 2 after catalytic converter
- J623 - Engine control unit
- ST1 - Fuse carrier 1
- SB9 - Fuse 9 on fuse holder B
- T4l - 4-pin connector, black
- T4m - 4-pin connector, brown
- T94 - 94-pin connector
- Z29 - Lambda probe 1 heater after catalytic converter
- Z30 - Lambda probe 2 heater after catalytic converter
- D107 - Connection 5 in engine compartment wiring harness

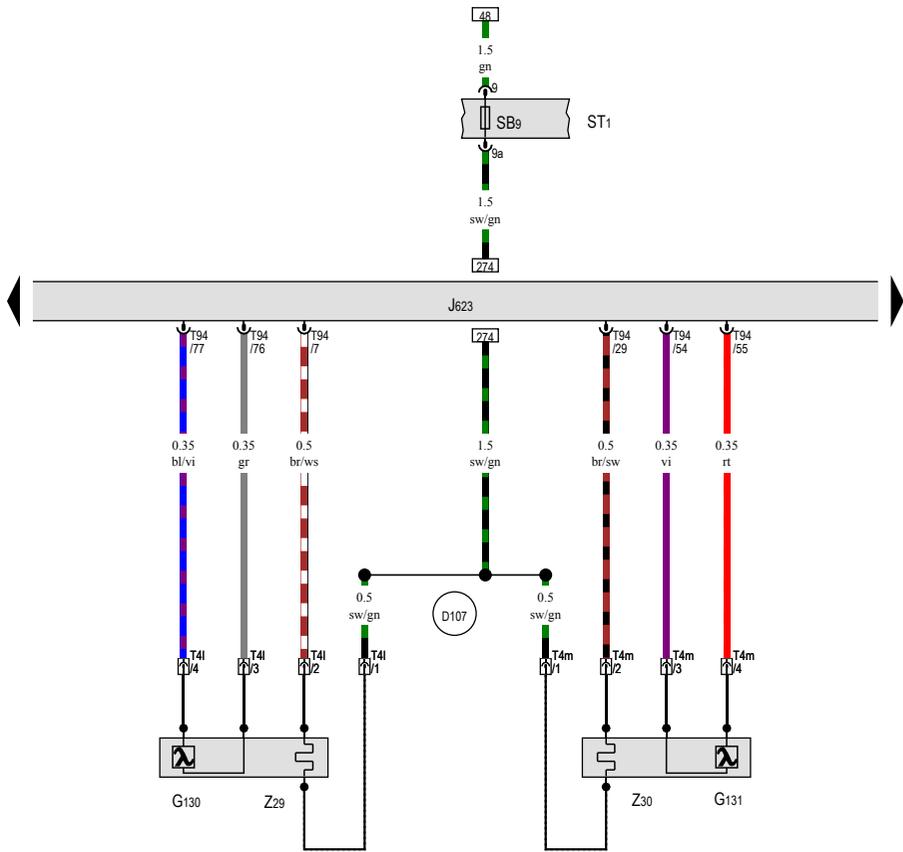

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 6, Injector, cylinder 8



- J623 - Engine control unit 
- N30 - Injector, cylinder 1
- N31 - Injector, cylinder 2
- N84 - Injector, cylinder 6
- N86 - Injector, cylinder 8
- T14c - 14-pin connector, in engine compartment
- T14d - 14-pin connector, in engine compartment
- T60 - 60-pin connector 
- D119 - Connection 17 in engine compartment wiring harness
- D120 - Connection 18 in engine compartment wiring harness

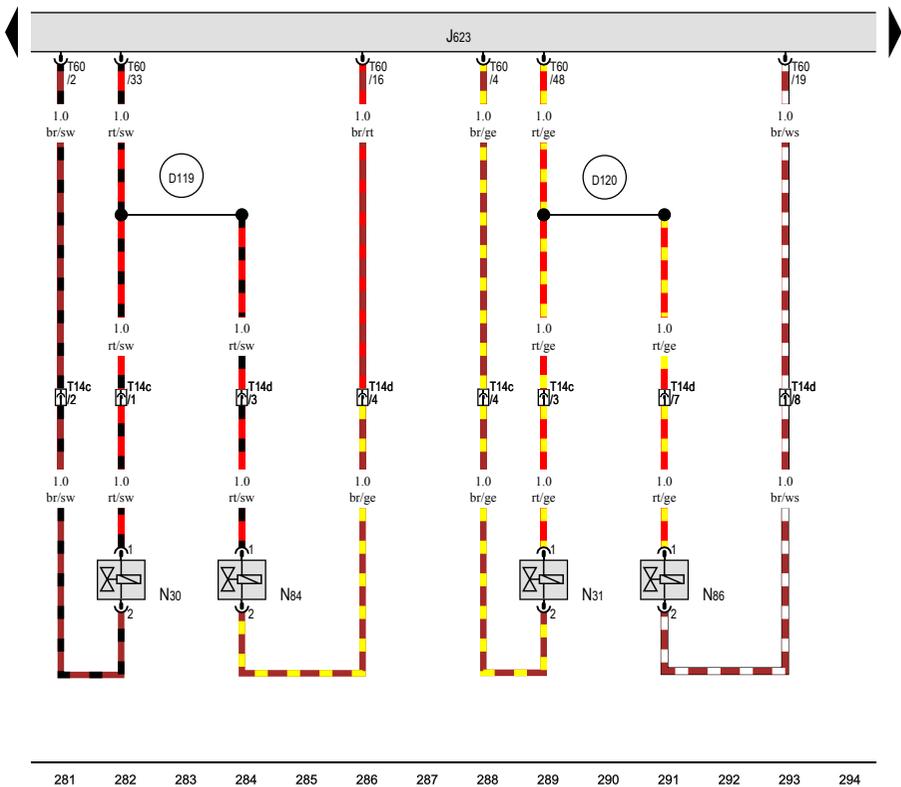


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Engine control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 7

- J623 - Engine control unit 
- N32 - Injector, cylinder 3
- N33 - Injector, cylinder 4
- N83 - Injector, cylinder 5
- N85 - Injector, cylinder 7
- T14c - 14-pin connector, in engine compartment
- T14d - 14-pin connector, in engine compartment
- T60 - 60-pin connector 
- D117 - Connection 15 in engine compartment wiring harness
- D118 - Connection 16 in engine compartment wiring harness

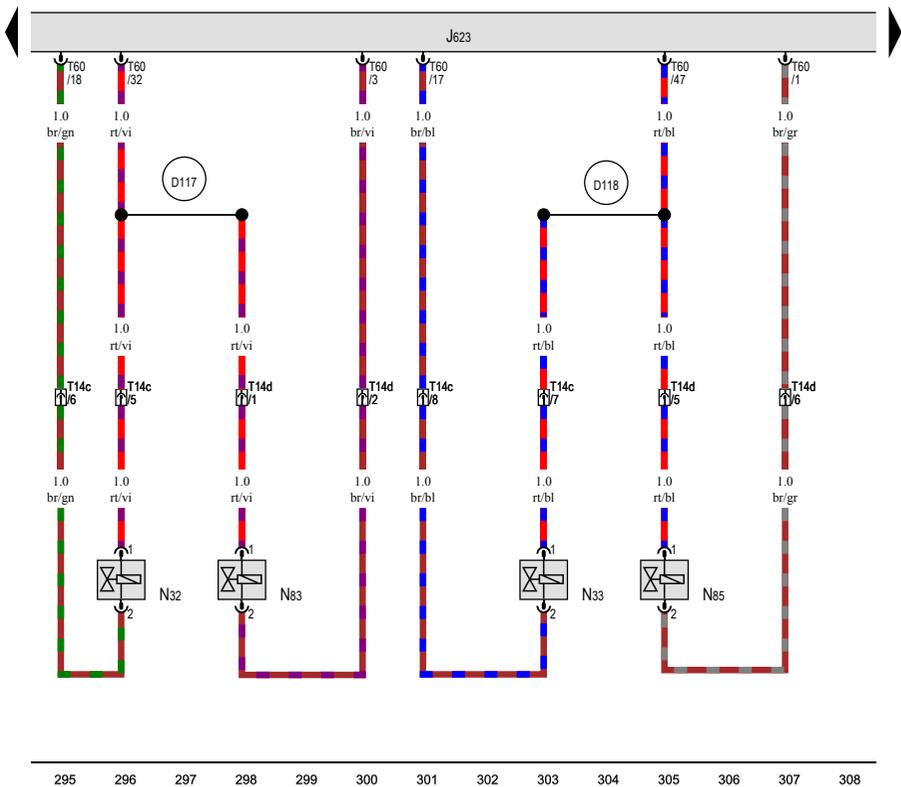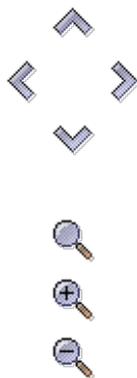


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

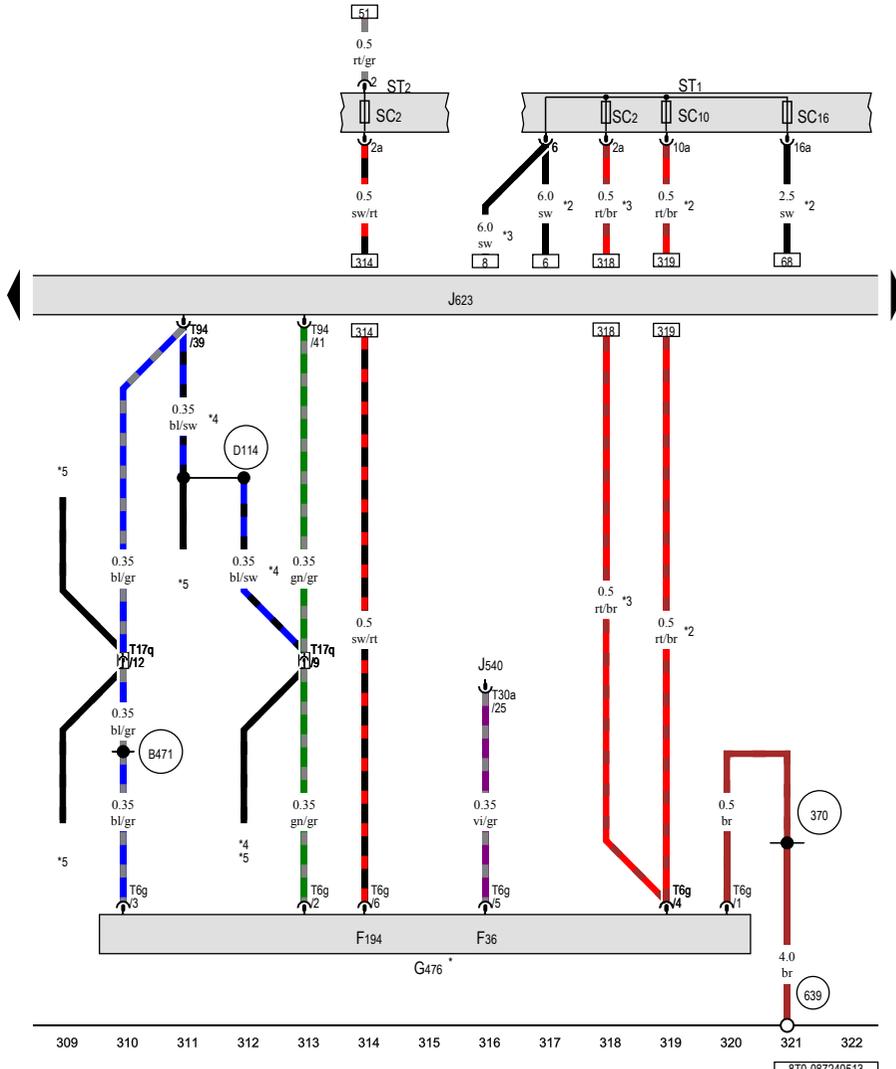

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Clutch position sender, Engine control unit

- F36 - Clutch pedal switch
- F194 - Clutch pedal switch for engine start
- G476 - Clutch position sender
- J540 - Control unit for electromechanical parking brake
- J623 - Engine control unit
- ST1 - Fuse carrier 1
- ST2 - Fuse carrier 2
- SC2 - Fuse 2 on fuse holder C
- SC10 - Fuse 10 on fuse holder C
- SC16 - Fuse 16 on fuse holder C
- T6g - 6-pin connector
- T17q - 17-pin connector, red
- T30a - 30-pin connector
- T94 - 94-pin connector
- 370 - Earth connection 5, in main wiring harness
- 639 - Earth point, left A-pillar
- B471 - Connection 7, in main wiring harness
- D114 - Connection 12 in engine compartment wiring harness
- * - Only models with manual gearbox
- *2 - From May 2009
- *3 - Up to April 2009
- *4 - Only models with automatic gearbox
- *5 - see applicable current flow diagram for automatic gearbox

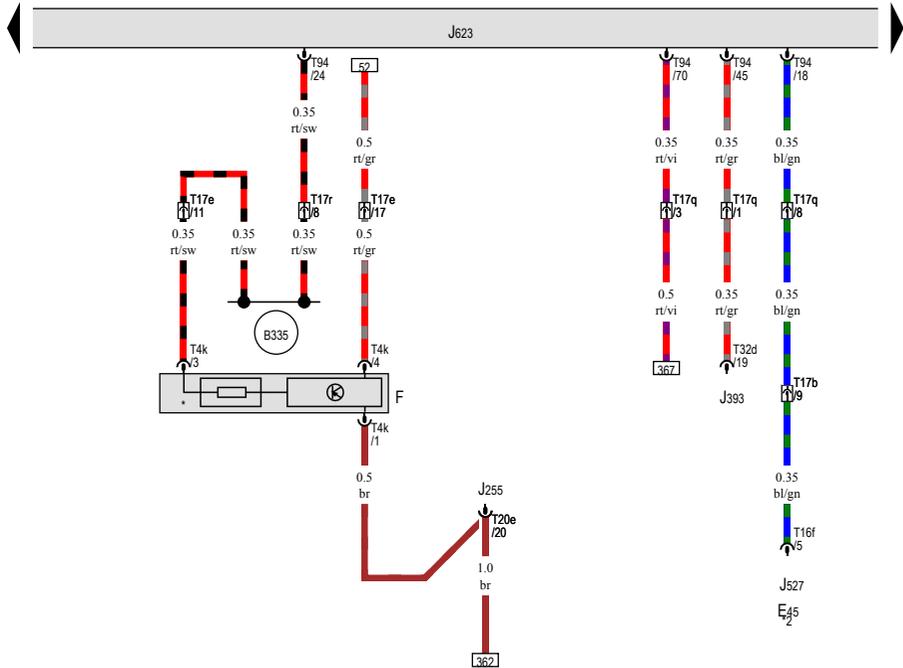

Brake light switch, Engine control unit


- E45 - Cruise control system switch
- F - Brake light switch
- J255 - Climatronic control unit
- J393 - Convenience system central control unit
- J527 - Steering column electronics control unit
- J623 - Engine control unit
- T4k - 4-pin connector
- T16f - 16-pin connector
- T17b - 17-pin connector, blue
- T17e - 17-pin connector, red
- T17q - 17-pin connector, red
- T17r - 17-pin connector, white
- T20e - 20-pin connector
- T32d - 32-pin connector
- T94 - 94-pin connector
- B335 - Connection 1 (54), in main wiring harness
- * - Solenoid coil for brake light sensor
- *2 - Only models with cruise control system (CCS)

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Automatic gearbox control unit, Data bus diagnostic interface, Engine control unit

- J217 - Automatic gearbox control unit 
- J533 - Data bus diagnostic interface 
- J623 - Engine control unit 
- T17b - 17-pin connector, blue 
- T17r - 17-pin connector, white 
- T20d - 20-pin connector 
- T94 - 94-pin connector 


- B383 - Connection 1 (powertrain CAN bus, high), in main wiring harness
- B385 - Connection 3 (powertrain CAN bus, high), in main wiring harness
- B390 - Connection 1 (powertrain CAN bus, low), in main wiring harness
- B392 - Connection 3 (powertrain CAN bus, low), in main wiring harness
- D159 - Connection (high bus), in engine compartment wiring harness
- D160 - Connection (low bus), in engine compartment wiring harness
- * - see applicable current flow diagram for automatic gearbox
- *2 - Only models with automatic gearbox

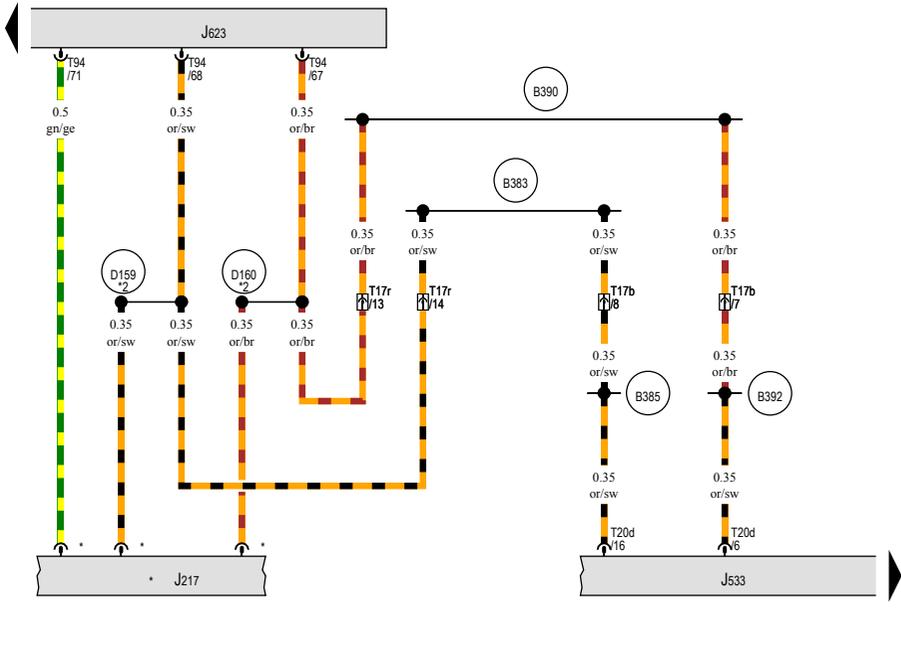

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

337 338 339 340 341 342 343 344 345 346 347 348 349 350


8TFLNR796R13

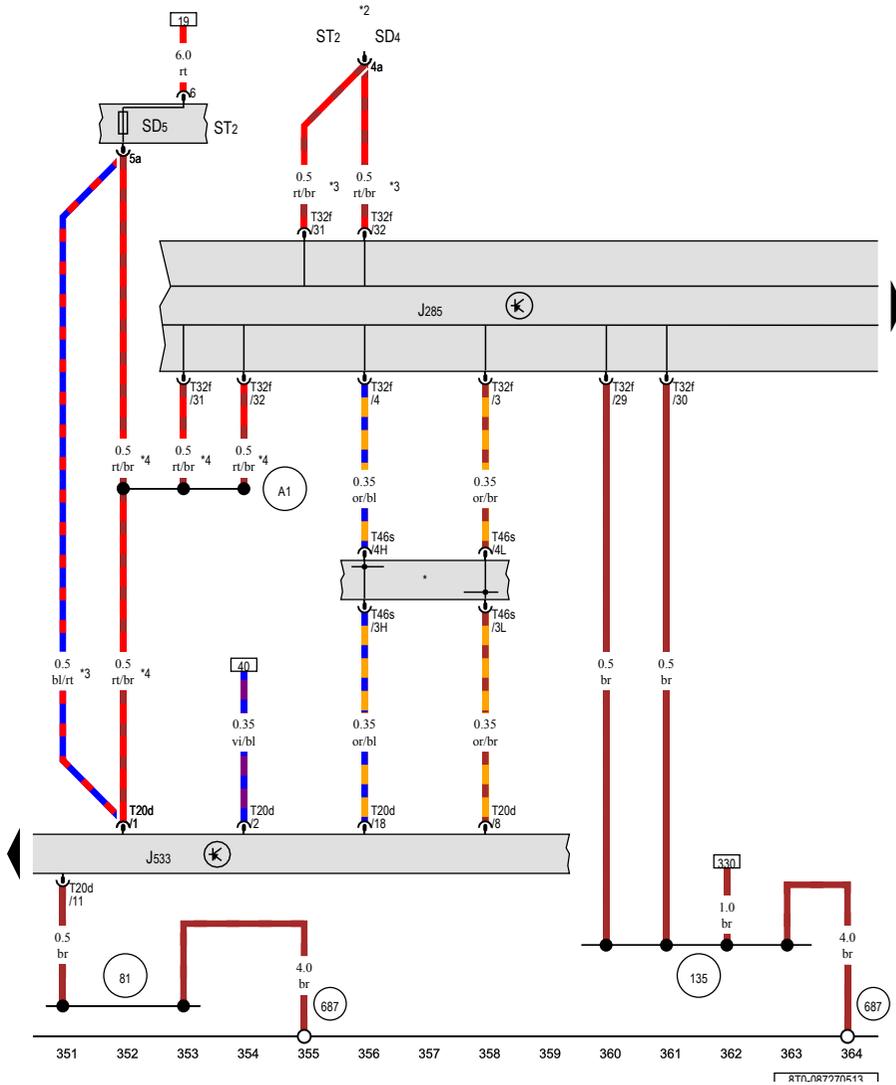

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Control unit in dash panel insert, Data bus diagnostic interface


- J285 - Control unit in dash panel insert
- J533 - Data bus diagnostic interface
- ST2 - Fuse carrier 2
- SD4 - Fuse 4 on fuse holder D
- SD5 - Fuse 5 on fuse holder D
- T20d - 20-pin connector
- T32f - 32-pin connector
- T46s - 46-pin connector
- 81 - Earth connection 1, in dash panel wiring harness
- 135 - Earth connection 2, in dash panel wiring harness
- 687 - Earth point 1, on centre tunnel
- A1 - Positive connection (30a), in dash panel wiring harness
- * - see applicable current flow diagram for CAN separating connector
- *2 - see applicable current flow diagram for fuse assignment
- *3 - From May 2009
- *4 - Up to April 2009

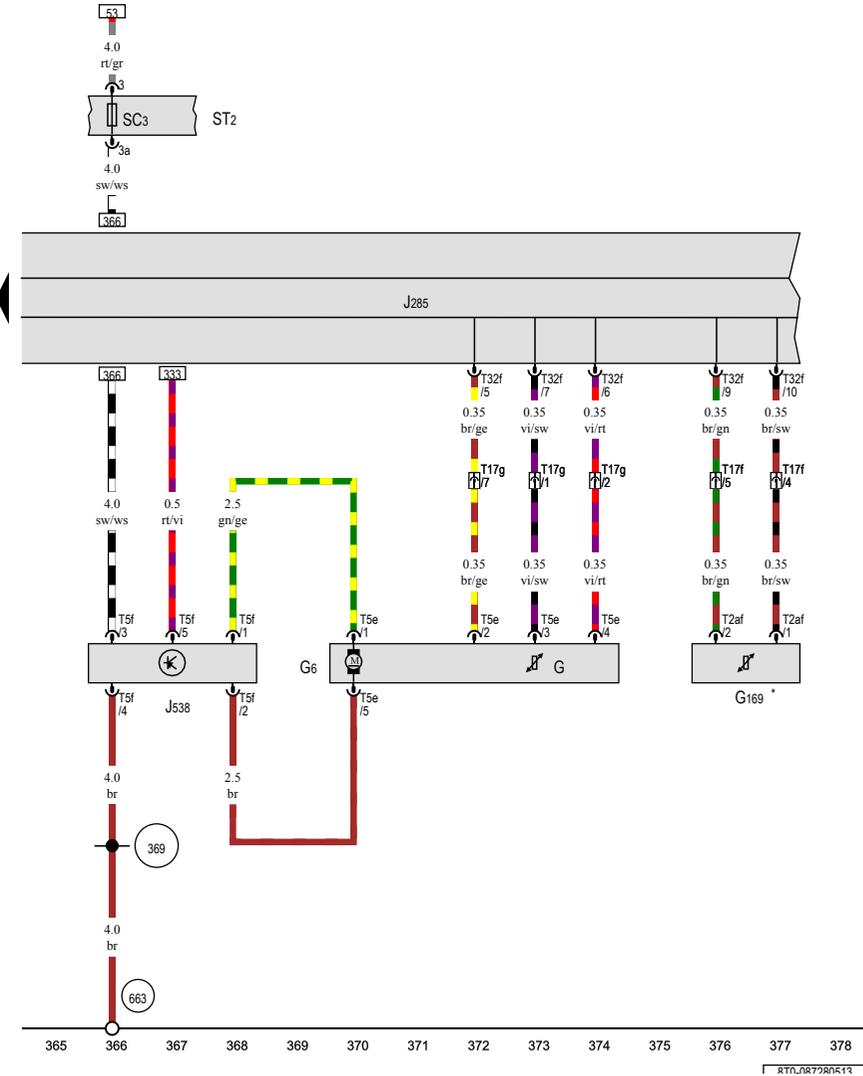

Fuel gauge sender, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit

- G - Fuel gauge sender
- G6 - Fuel system pressurisation pump
- G169 - Fuel gauge sender 2
- J285 - Control unit in dash panel insert
- J538 - Fuel pump control unit
- ST2 - Fuse carrier 2
- SC3 - Fuse 3 on fuse holder C
- T2af - 2-pin connector
- T5e - 5-pin connector
- T5f - 5-pin connector
- T17f - 17-pin connector, brown
- T17g - 17-pin connector, black
- T32f - 32-pin connector
- 369 - Earth connection 4, in main wiring harness
- 663 - Earth point, rear right side panel
- * - Only models with all-wheel drive

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

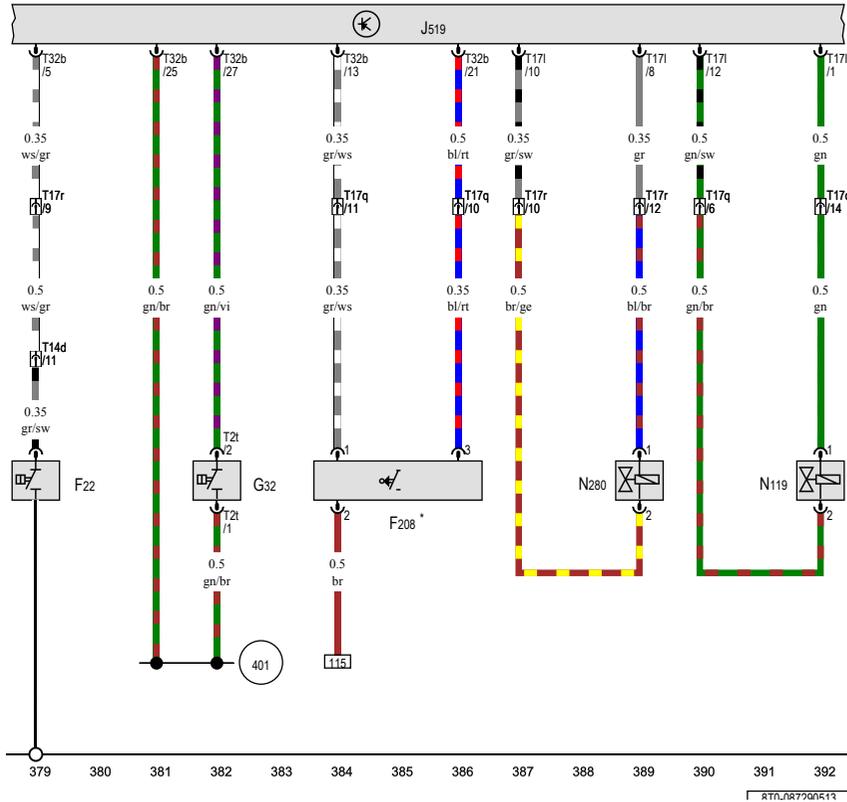

Oil pressure switch, Gear detector switch, Coolant shortage indicator sender, Onboard supply control unit, Servotronic solenoid valve, Air conditioner compressor regulating valve

- F22 - Oil pressure switch
- F208 - Gear detector switch
- G32 - Coolant shortage indicator sender
- J519 - Onboard supply control unit
- N119 - Servotronic solenoid valve
- N280 - Air conditioner compressor regulating valve
- T2t - 2-pin connector
- T14d - 14-pin connector, in engine compartment
- T17l - 17-pin connector
- T17q - 17-pin connector, red
- T17r - 17-pin connector, white
- T32b - 32-pin connector
- 401 - Earth connection (sender earth), in interior wiring harness
- * - Only models with manual gearbox

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink