


Exploded view - plenum chamber partition panel

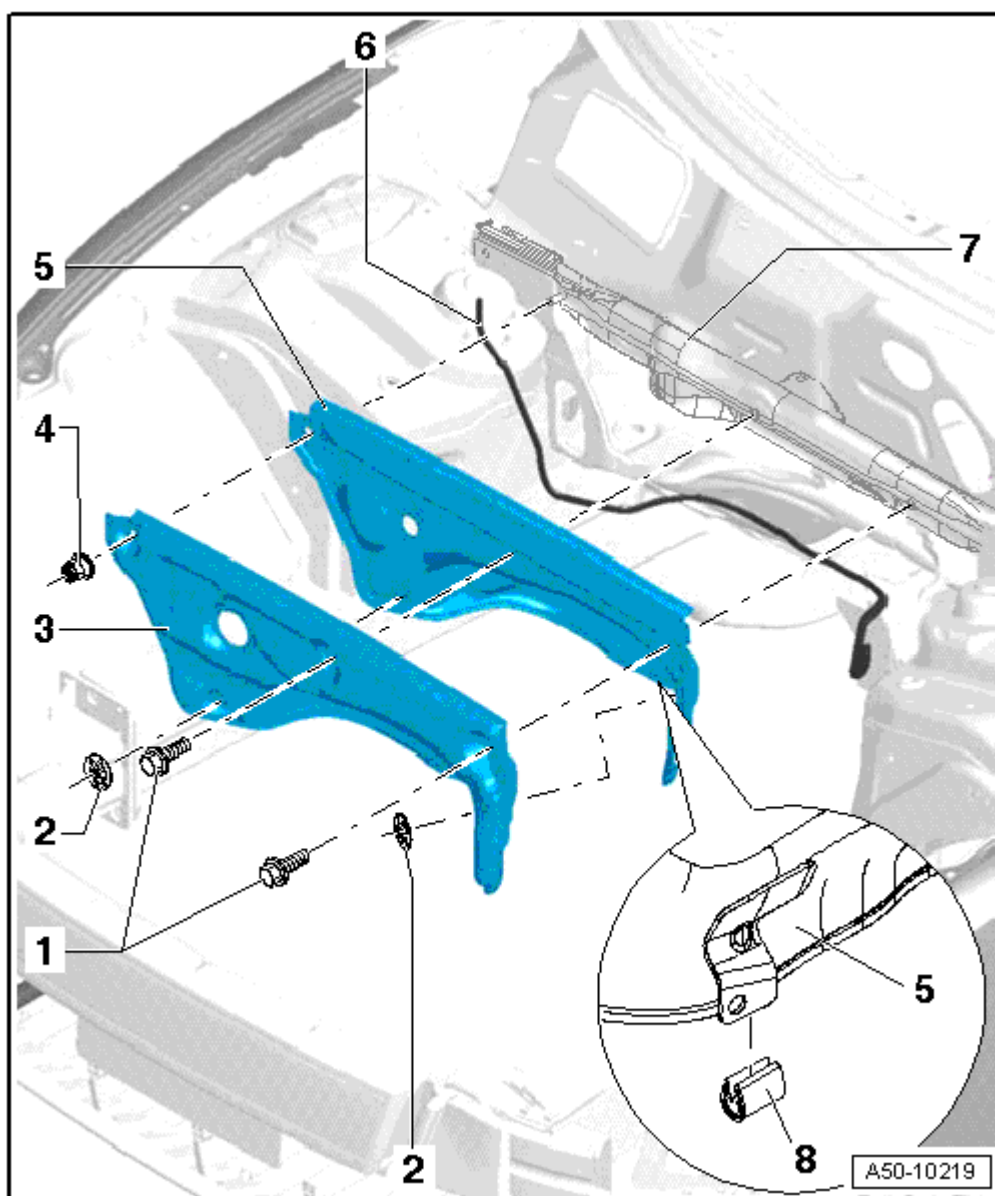

1 - Bolt

q 7 Nm

2 - Clamping washer

q When installing, only press on studs of plenum chamber partition panel.

3 - Insulation

q Insulation secured to plenum chamber partition panel with clamping washer

4 - Nut

q 7 Nm

5 - Plenum chamber partition panel



Note

When removing, pay attention to different versions.

q Before removing:

- Remove body brace →[Rep. gr.40](#).
- Detach washer fluid reservoir.
- Detach vacuum line to brake servo unit at connection to plenum chamber partition panel.
- Unclip vacuum line from plenum chamber partition panel.
- Disconnect/unclip coolant lines routed through plenum chamber partition panel →[Rep. gr.19](#).
- q To remove, unscrew bolts -1- and nut -4-.
- 6 - Seal
- q Push seal on from underneath.
- 7 - Plenum chamber
- 8 - Edge protection strip
- q Slide edge protection strip onto lug on plenum chamber partition panel.