

## Audi A4

## Fitting Locations

No. 803 / 1

Edition 09.2012

## Relays

## Overview of relays

**Note:**

♦ Overview also valid for Avant models (5-door)!

**1 - Relay and fuse holder F -SF-**

- ❑ Components: -J9- ,  
-J84- , -J807-
- ❑ Location for models up  
to October 2011:  
→ Chapter
- ❑ Location for models  
from November 2011:  
→ Chapter

**1 - Battery isolation relay -J7-**

- ❑ Location in spare wheel  
recess, next to second  
battery

**2 - Relay and fuse holder  
with onboard supply  
control unit -J519-**


- ❑ Components: -J160- ,  
-J329- , -J413- , -J601- ,  
-J608- , -J910-
- ❑ Location for models with  
left-hand drive only:  
→ Chapter
- ❑ Location for models with  
right-hand drive only:  
→ Anchor

**3 - 3-pin relay and fuse  
holder**

- ❑ Components: -J359- ,  
-J360- , -J604-
- ❑ Location for models with left-hand drive only: → Chapter
- ❑ Location for models with right-hand drive only: → Anchor

**4 - Relay and fuse holder B -SB-**

- ❑ Components: -J17- , -J53- , -J151- , -J179- , -J271- , -J299- , -J317- , -J496- , -J695- , -J696- ,  
-J757- , -J545- , -J569- , -J832- , -J976-
- ❑ Location for models with left-hand drive only: → Chapter
- ❑ Location for models with right-hand drive only: → Anchor

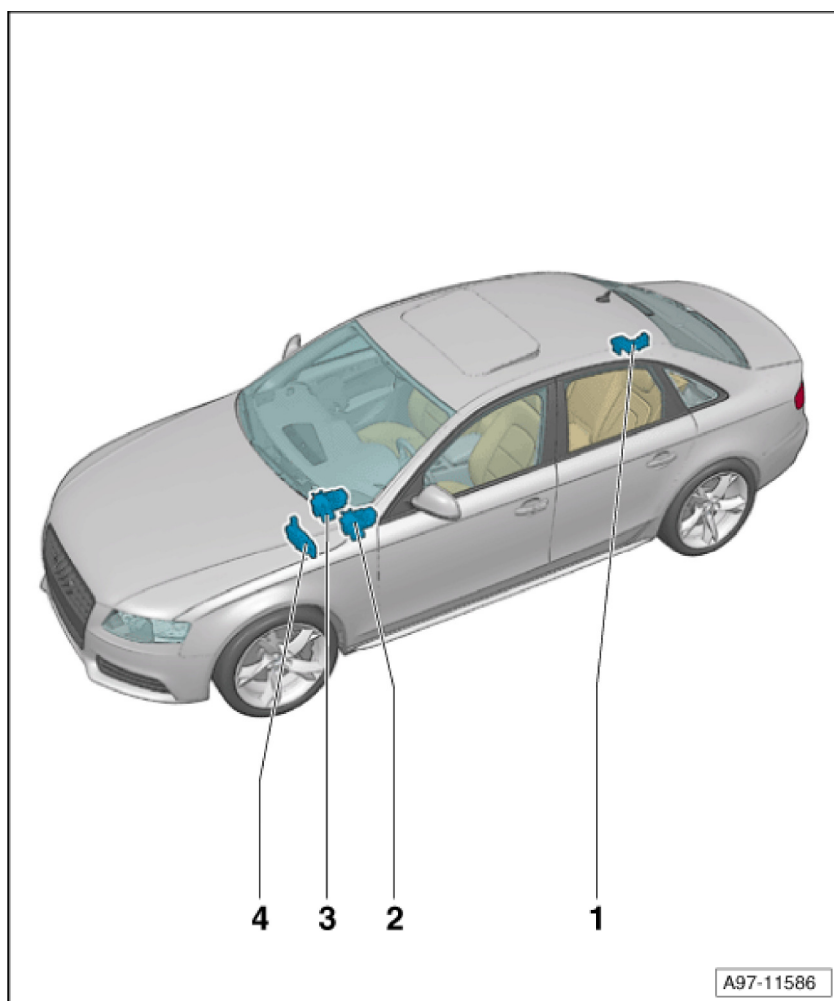

## Relay and fuse holder with onboard supply control unit -J519-

## Location, relay and fuse holder with onboard supply control unit -J519- for models with left-hand drive:

Below the dash panel, driver side


- 1) valid until May 2009 for vehicles with 3.2l with 6-cylinder petrol engine without auxiliary heater only
- 2) for special vehicles only
- 3) Models with start/stop system only



### Note:

- ◆ Figure shows left-hand drive model.
- ◆ Figure for right-hand drive models → *Anchor* .

- 1 - Vacant
- 2 - Circulation pump relay -J160- → **Note**
- 2 - Horn relay -J413-
- 2 - Automatic anti-dazzle interior mirror relay -J910- → **Note**
- 3 - Terminal 15 voltage supply relay -J329-
- 4 - Control unit for taxi alarm remote control -J601- → **Note**
- 4 - Special vehicle control unit -J608- → **Note**

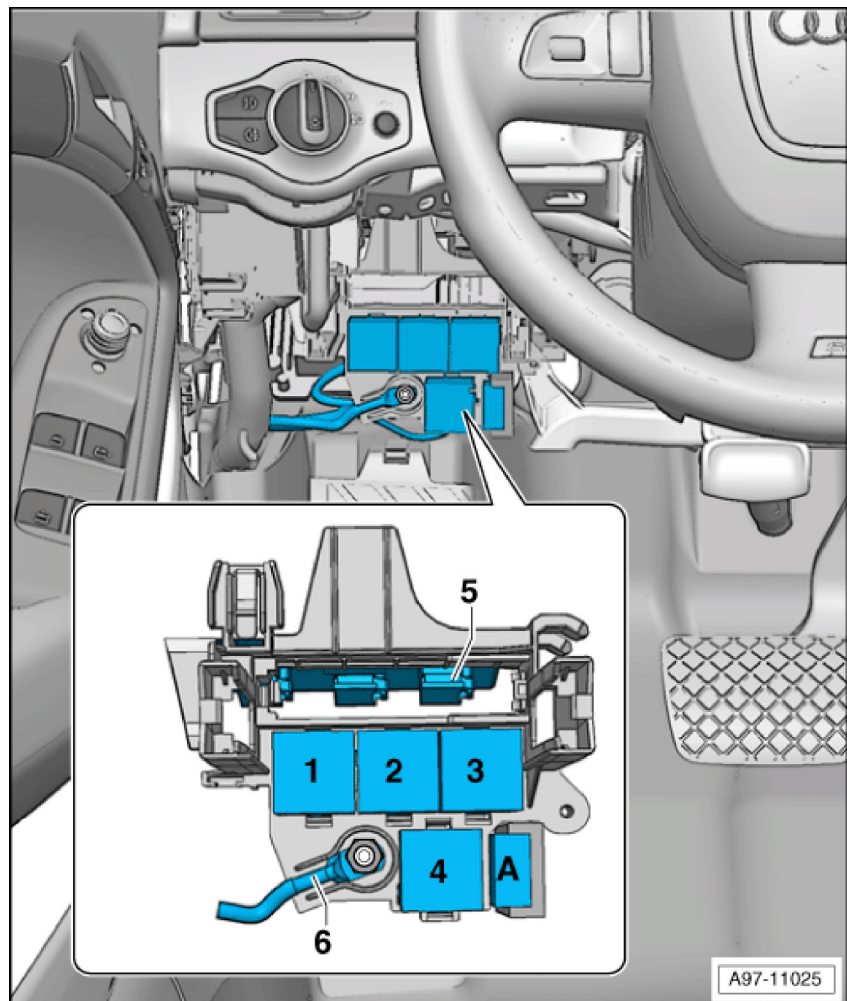

## Location, relay and fuse holder with onboard supply control unit -J519- for models with right-hand drive:

Below the dash panel, driver side


- 4) valid until May 2009 for vehicles with 3.2l with 6-cylinder petrol engine without auxiliary heater only
- 5) for special vehicles only
- 6) Models with start/stop system only



### Note:

- ◆ Figure shows right-hand drive model.
- ◆ Figure for left-hand drive models → *Anchor* .

- 1 - Vacant
- 2 - Circulation pump relay  
-J160- → **Note**
- 2 - Horn relay -J413-
- 2 - Automatic anti-dazzle  
interior mirror relay  
-J910- → **Note**
- 3 - Terminal 15 voltage  
supply relay -J329-
- 4 - Control unit for taxi  
alarm remote control  
-J601- → **Note**
- 4 - Special vehicle control  
unit -J608- → **Note**

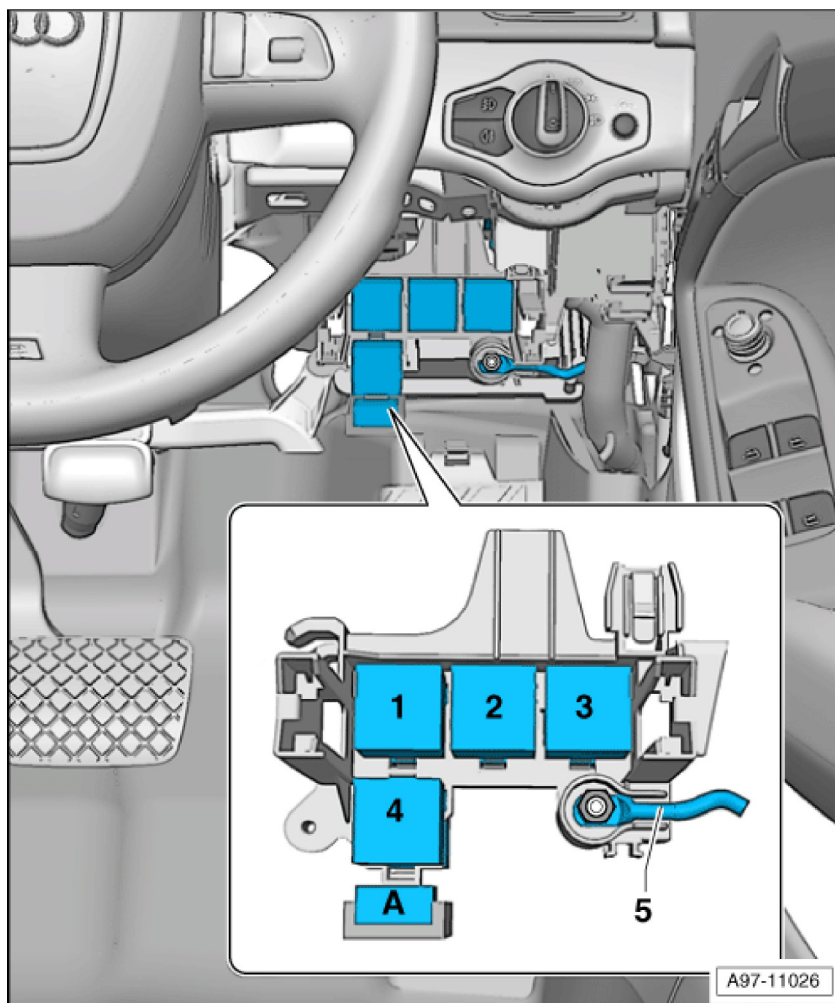

### 3-pin relay and fuse holder

**Location, 3-pin relay and fuse holder for models with left-hand drive:**


Below the dash panel, driver side, on relay and fuse carrier with onboard supply control unit -J519- and screw connection.


<sup>7)</sup> Models with a diesel engine only



**Note:**

- ♦ Figure shows left-hand drive model.
- ♦ Figure for right-hand drive models → **Anchor**.
- 1 - Auxiliary air heater  
control unit -J604-
- 2 - Low heat output relay  
-J359- → **Note**
- 3 - High heat output relay  
-J360- → **Note**

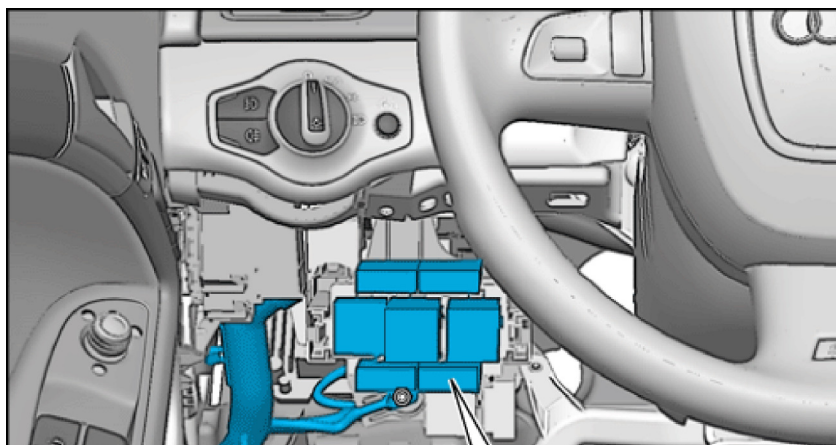

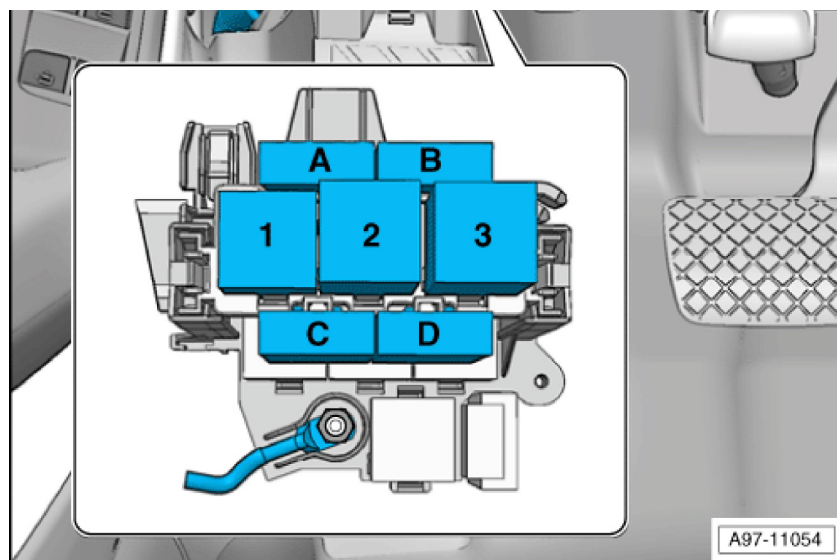

### Location, 3-pin relay and fuse holder for models with right-hand drive:


Below the dash panel, driver side, on relay and fuse carrier with onboard supply control unit -J519- and screw connection.

<sup>8)</sup> Models with a diesel engine only



#### Note:

- ◆ Figure shows right-hand drive model.
- ◆ Figure for left-hand drive models → [Anchor](#).
- 1 - Auxiliary air heater control unit -J604-
- 2 - Low heat output relay -J359- → **Note**
- 3 - High heat output relay -J360- → **Note**

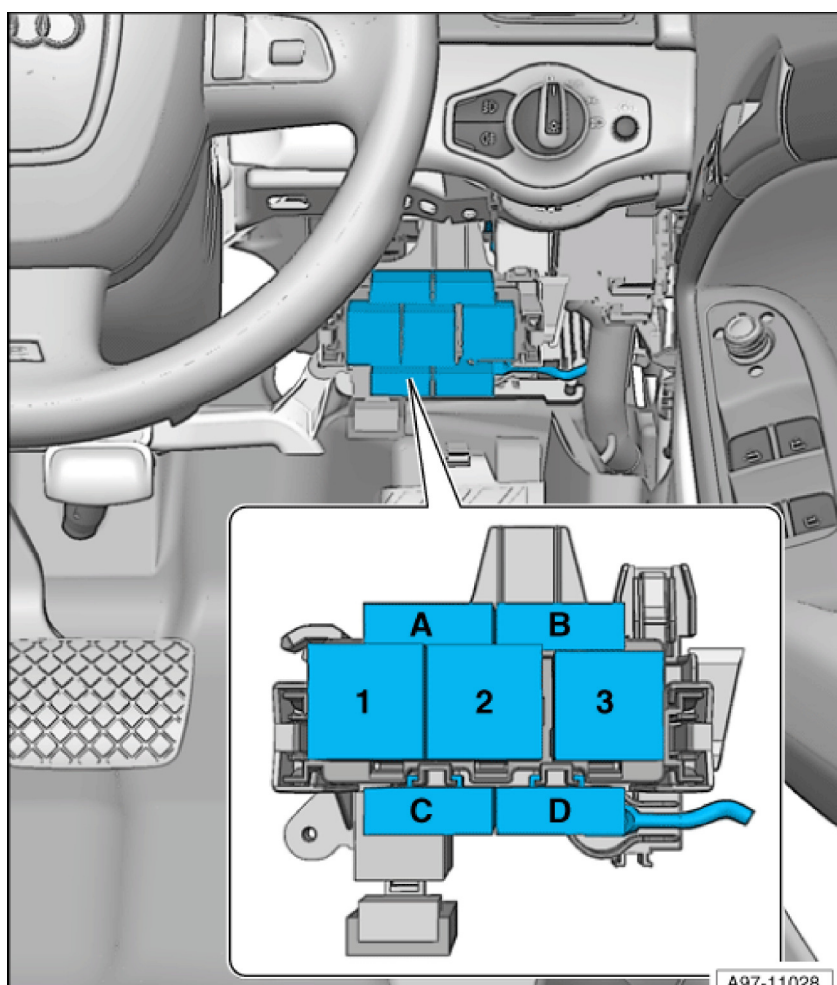



## Relay and fuse holder B -SB-

**Location, relay and fuse holder B -SB- for models with left-hand drive:**

In electronics box in plenum chamber, driver side

- 9) Models with a diesel engine only
- 10) for models with 4-cylinder petrol engine only
- 11) for models with 6-cylinder petrol engine only
- 12) for models with 4-cylinder petrol engine (1.8 l TFSI gen. 2) only
- 13) for models with 8-cylinder petrol engine (RS4) only



### Note:

- ◆ Figure shows left-hand drive model.
- ◆ Figure for right-hand drive models → [Anchor](#).
- ◆ -SB14- to -SB17- in -ST1- for models from November 2011 only.

**A - Automatic glow period control unit -J179-**

→ **Note**

**A - Engine components current supply relay -J757-**

→ **Note** → **Note**

**B - Starter motor relay -J53-**

**B - Starter motor relay 2 -J695-**

**C - Secondary air pump relay -J299-**

→ **Note**,

→ **Note**

**D - Terminal 30 voltage supply relay -J317-**

→ **Note**

**D - Motronic current supply relay -J271-**

→ **Note**

→ **Note**

**E - Fuel pump relay -J17-**

→ **Note**

**E - Brake servo relay -J569-**

→ **Note**

**E - Supplementary fuel pump relay -J832-**

→ **Note**

**E - Continued coolant circulation relay -J151-**

→ **Note**

**E - Additional coolant pump relay -J496-**

→ **Note**

**E - Gearbox cooling circuit relay -J696-**


→ **Note**

**E - Engine components current supply relay 2 -J976-**

→ **Note**

**F - Secondary air pump relay 2 -J545-**

→ **Note**

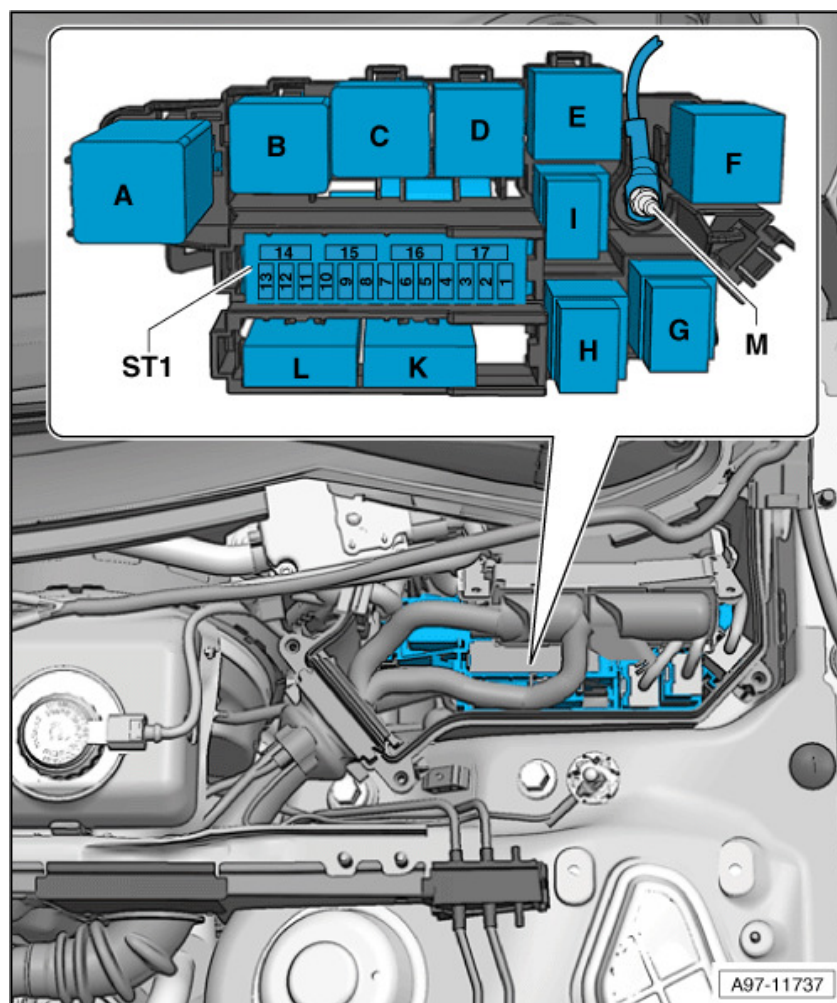

## Location, relay and fuse holder B -SB- for models with right-hand drive:

In electronics box in plenum chamber, driver side

- <sup>14)</sup> Models with a diesel engine only
- <sup>15)</sup> for models with 4-cylinder petrol engine only
- <sup>16)</sup> for models with 6-cylinder petrol engine only
- <sup>17)</sup> for models with 4-cylinder petrol engine (1.8 l TFSI gen. 2) only
- <sup>18)</sup> for models with 8-cylinder petrol engine (RS4) only



### Note:

- ♦ Figure shows right-hand drive model.
- ♦ Figure for left-hand drive models → [Anchor](#).
- ♦ -SB14- to -SB17- in -ST1- for models from November 2011 only.

**A - Automatic glow period control unit -J179-**

→ **Note**

**A - Engine components current supply relay -J757-**

→ **Note** → **Note**

**B - Starter motor relay -J53-**

**B - Starter motor relay 2 -J695-**

**C - Secondary air pump relay -J299-**

→ **Note**, → **Note**

**D - Terminal 30 voltage supply relay -J317-**

→ **Note**

**D - Motronic current supply relay -J271-**

→ **Note** → **Note**

**E - Fuel pump relay -J17-**

→ **Note**

**E - Supplementary fuel pump relay -J832-**

→ **Note**

**E - Continued coolant circulation relay -J151-**

→ **Note**

**E - Additional coolant pump relay -J496-**

→ **Note**

**E - Gearbox cooling circuit relay -J696-**


→ **Note**

**E - Engine components current supply relay 2 -J976-**

→ **Note**

**F - Secondary air pump relay 2 -J545-**

→ **Note**

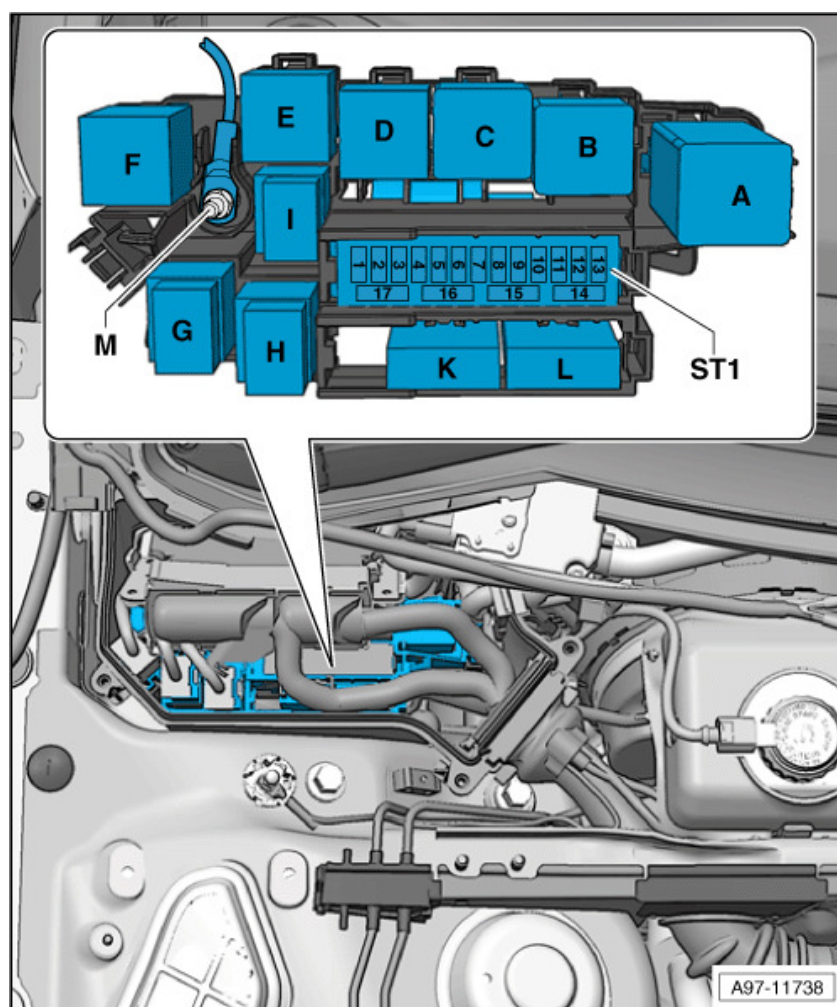

## Relay and fuse holder F -SF- up to October 2011

Location, relay- /fuse holder F -SF- :

in luggage compartment, behind side trim on right


<sup>19)</sup> for special vehicles only

#### Position of relays saloon (4-door vehicle):

- A - Vacant
- B - Two-way radio cut-off relay -J84-  
→ **Note**
- C - Heated rear window relay -J9-
- D - Vacant
- E - Relay for power sockets -J807-

#### Relay assignment Avant (5-door vehicle):

- A - Heated rear window relay -J9-
- B - Two-way radio cut-off relay -J84-  
→ **Note**
- C - Relay for power sockets -J807-
- D - Vacant
- E - Vacant

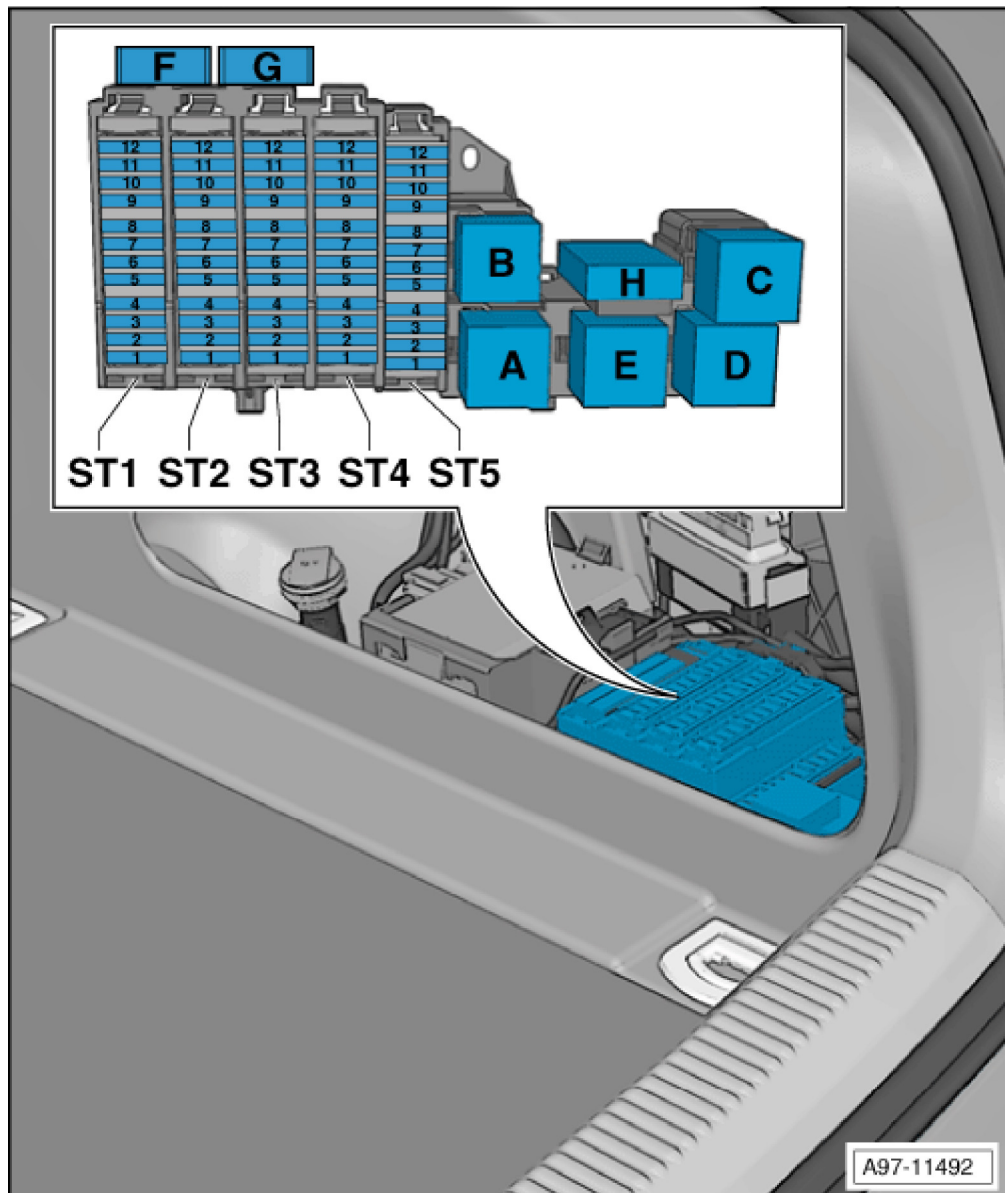

### Relay and fuse holder F -SF- from November 2011

#### Location, relay and fuse holder F -SF- from November 2011:

in luggage compartment, behind side trim on right

<sup>20)</sup> for special vehicles only

#### Position of relays saloon (4-door vehicle):

- A - Vacant

B - Reducing agent metering system relay -J963-

C - Two-way radio cut-off relay -J84- , discontinued from April 2012 → **Note**

D - Heated rear window relay -J9-

E - Relay for power sockets -J807-

**Relay assignment Avant (5-door vehicle):**

A - Heated rear window relay -J9-

B - Reducing agent metering system relay -J963-

C - Relay for power sockets -J807-

D - Vacant

E - Vacant

