

Removing and installing alarm horn -H12-

Removing


Vehicles up to 05.2008:

- Unclip plenum chamber covers -1- and -2- and detach.




Note

Disregard -item 3- and -arrow-.

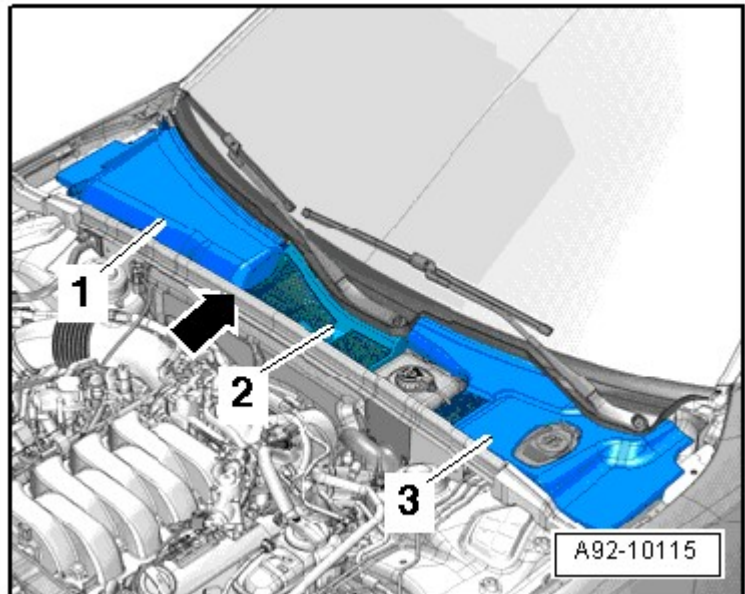

Vehicles from 06.2008 onwards:

- Remove bolts -3-.
- Unclip retaining clips -2- from retainer and detach plenum chamber cover -1-.

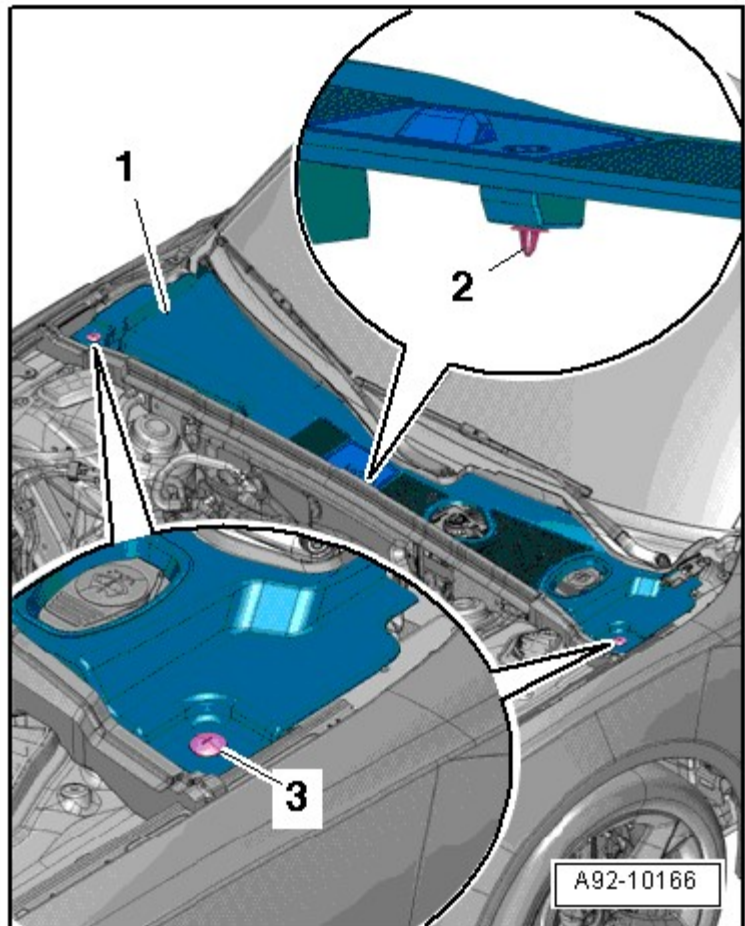

All vehicles (continued):

- Remove nut -3-.
- Unplug electrical connector -1-.
- Take out alarm horn -H12--item 2- upwards.

Installing

- Tightening torque → Chapter „Overview - interior monitoring“

Installation is carried out in the reverse order; note the following:

- Engage retaining tab in recess on mounting bracket.

