


Removing and installing plenum chamber cover - vehicles up to 05.2008



Note

t Note different versions.

t Additional covers may also have to be removed first depending on the vehicle equipment.

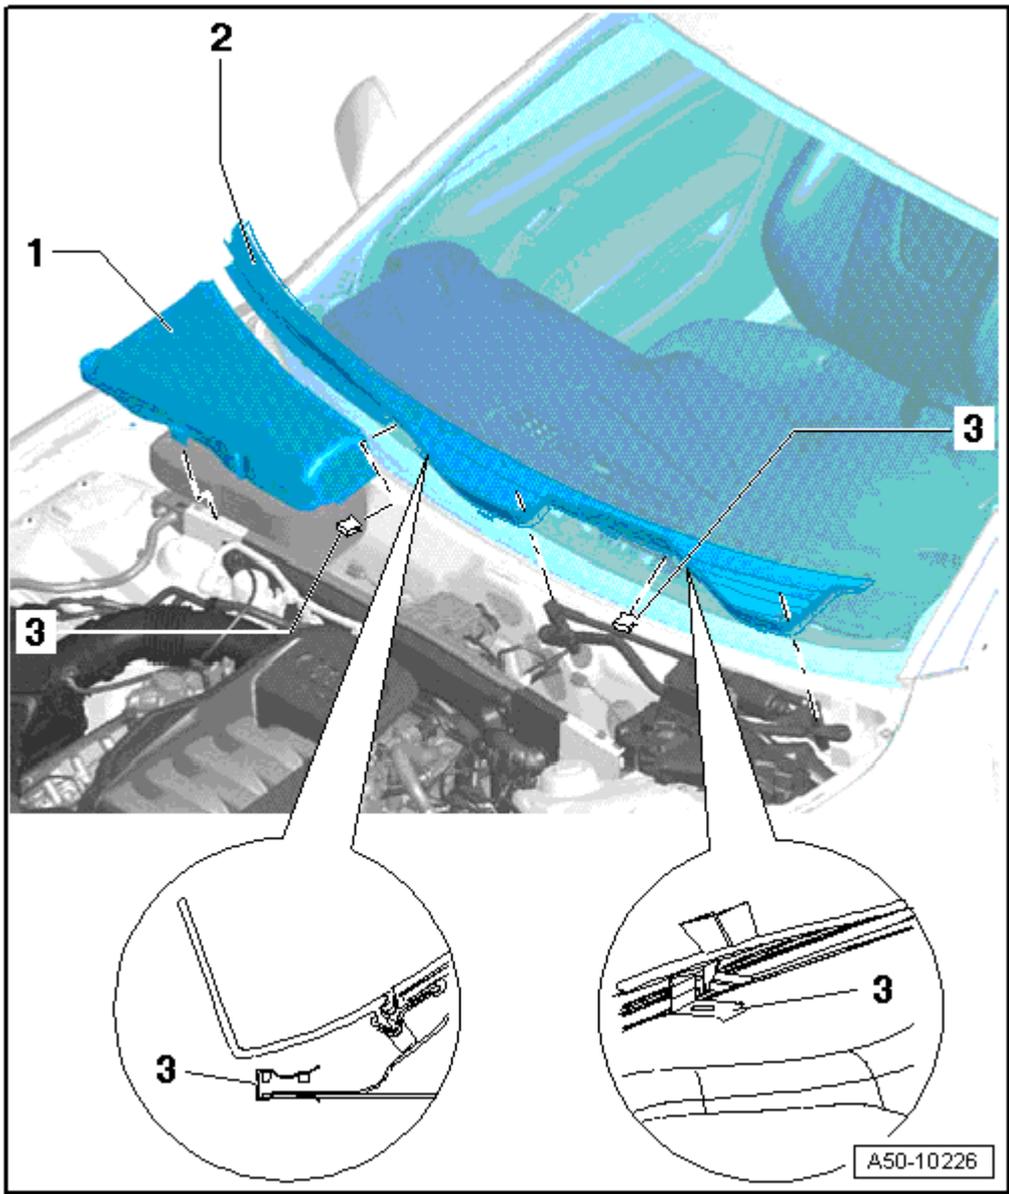

1 - Additional cover (right-side)

q When removing, first detach retaining clip (front).



Note

Depending on the vehicle equipment, the cover and the plenum chamber cover may be a single component.

q Lift cover at front and take out of plenum chamber cover.

2 - Plenum chamber cover

q Windscreen wiper arms removed

q Additional covers (left, centre, right) removed

q Pull off clips -3-.



### Note

To facilitate removal / installation, spray a small quantity of soap solution onto windscreen surround.

q Pull trim out of surround, starting at side of windscreen and lifting it upwards vertically.



### Caution

Danger of smashing glass during installation.

When installing, trim panel must not be knocked on with a hammer, etc.


Starting at the side, carefully press trim into windscreen surround.

3 - Clip

q After installing plenum chamber cover, push clips on at points indicated.

4 - Windscreen

### Removing additional covers

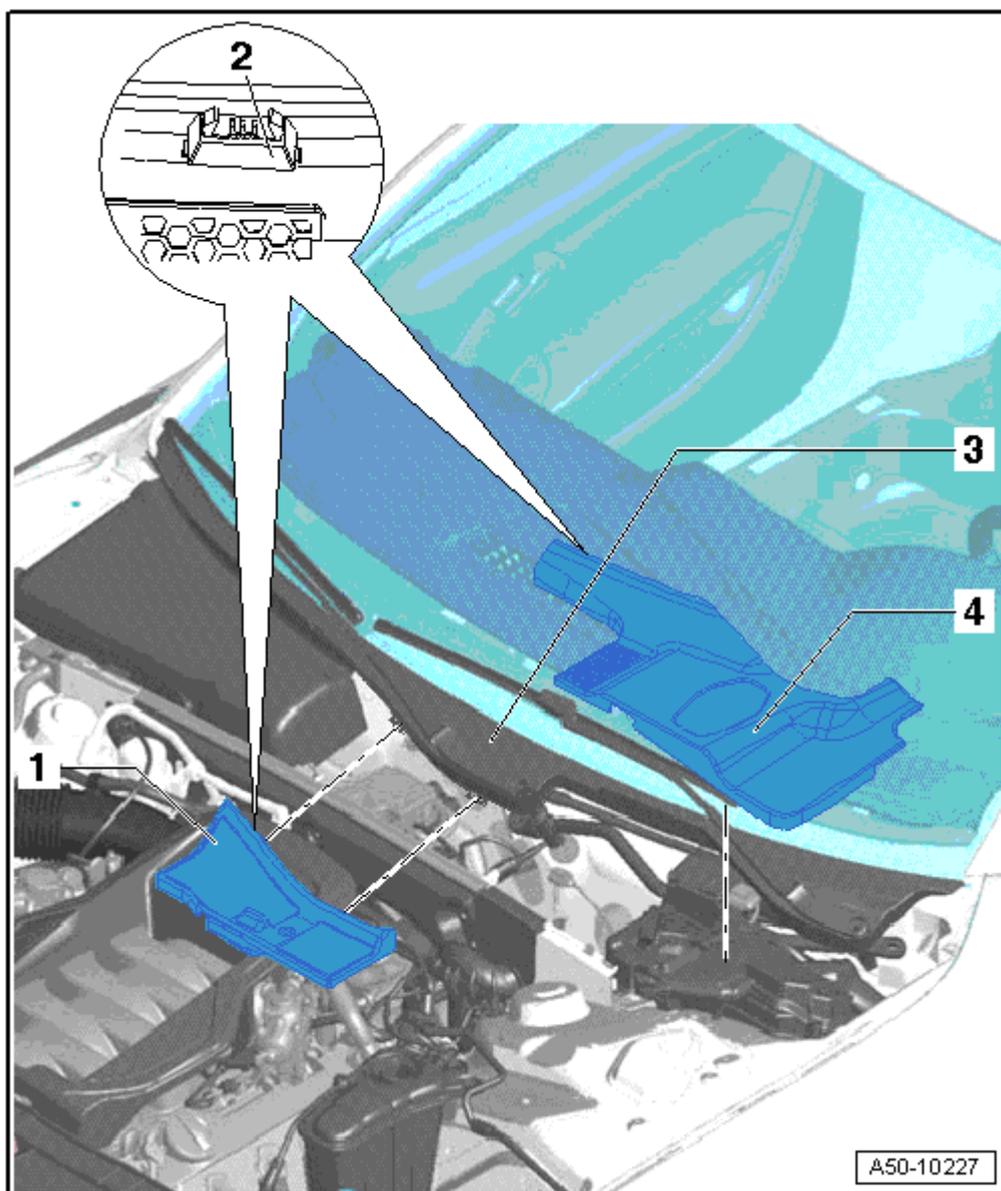

1 - Additional cover (centre)

- q Unclip at front bottom first, then release fasteners -2- at rear (pressing them together slightly from below) and lift out of plenum chamber cover.
- 2 - Fastener
- 3 - Additional cover (left-side)
- q Unclip at front bottom first, then release fasteners at rear and lift out of plenum chamber cover.
- 4 - Plenum chamber cover
- 5 - Catches for plenum chamber cover